


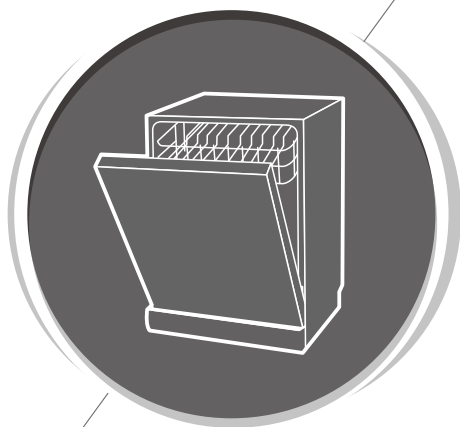

Dishwasher

Instruction Manual

PART I : Generic Version

MDW14-7713AD



Please read this manual carefully
before using the dishwasher and
Keep this manual for future reference.

CONTENTS

01	03	SAFETY INFORMATION
02	08	PRODUCT OVERVIEW
03	09	USING YOUR DISHWASHER
	09	Loading The Salt Into The Softener
	11	Basket Loading Tips
04	13	MAINTENANCE AND CLEANING
	13	External Care
	13	Internal Care
	16	Caring For The Dishwasher
05	17	INSTALLATION INSTRUCTION
	17	Power Connection
	18	Water Supply And Drain Connection
	19	Of Drain Hoses Positioning The
	20	Appliance
	20	Built-In Installation (for the integrated model)
06	24	TROUBLESHOOTING TIPS
	27	Availability Of Spare Parts
07	28	LOADING THE BASKETS
	30	Cutlery Rack Used Tips



NOTE:

- Reviewing the section on Troubleshooting Tips will help you solve some common problems by yourself.
- If you cannot solve the problems by yourself, please ask for help from a professional technician.
- The manufacturer, following a policy of constant development and updating of the product, may make modifications without giving prior notice.
- If lost or out-of-date, you can receive a new user manual from the manufacturer or responsible vendor.

SAFETY INFORMATION

⚠ WARNING

When using your dishwasher, follow the precautions listed below:

- Installation and repair can only be carried out by a qualified technician
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision. (For EN60335-1)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (For IEC60335-1)

- Packaging material could be dangerous for children!
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is for indoor household use only.
To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Please unplug before cleaning and maintenance the appliance .Use a soft cloth moisten with mild soap, and then use a dry cloth to wipe it again.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.



Earthing Instructions


- This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with an earthing conductor plug.
- The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.
- Improper connection of the equipment-earthing conductor can result in the risk of an electric shock.
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded.

- Do not modify the plug provided with the appliance if it does not fit the outlet.
- Have a proper outlet installed by a qualified electrician.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Open the door very carefully if the dishwasher is operating, there is a risk of water squirting out.
- Do not place any heavy objects on or stand on the door when it is open. The appliance could tip forward.
- When loading items to be washed:
 - 1) Locate sharp items so that they are not likely to damage the door seal;
 - 2) Warning: Knives and other utensils with sharp points must be loaded in the basket with their points facing down or placed in a horizontal position.
- Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open.
- Check that there are no detergent residues after completion of the wash cycle.
- Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent.

- For unmarked plastic items not so marked, check the manufacturer's recommendations.
- Use only detergent and rinse agents recommended for use in an automatic dishwasher.
- Never use soap, laundry detergent, or hand washing detergent in your dishwasher.
- The door should not be left open, since this could increase the risk of tripping.
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper with controls.
- The appliance needs to be connected to the main water valve using new hose sets. Old sets should not be reused.
- To save energy, in stand by mode, the appliance will switch off automatically after 15 minutes without any user interaction.
- The maximum number of place settings to be washed is 15.
- The maximum permissible inlet water pressure is 1MPa.
- The minimum permissible inlet water pressure is 0.04MPa.

• Disposal



- For disposing of package and the appliance please go to a recycling center. Therefore cut off the power supply cable and make the door closing device unusable.
- Cardboard packaging is manufactured from recycled paper and should be disposed in the waste paper collection for recycling.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- For more detailed information about recycling of this product, please contact your local city office and your household waste disposal service.
- **DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.**

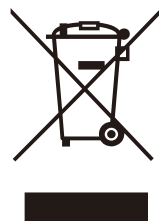


PRODUCT OVERVIEW

❗ IMPORTANT:

To get the best performance from your dishwasher, read all operating instructions before using it for the first time.

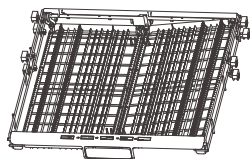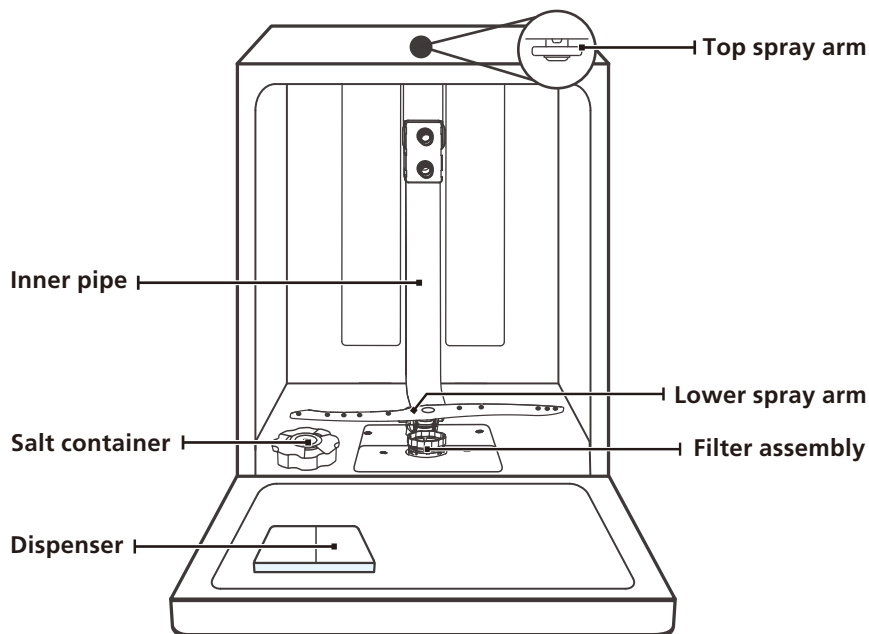

Cutlery rack

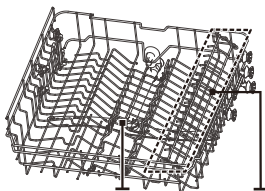

Upper basket




Lower basket

💡 NOTE:

Pictures are only for reference, different models may be different.

USING YOUR DISHWASHER

Before using your dishwasher :

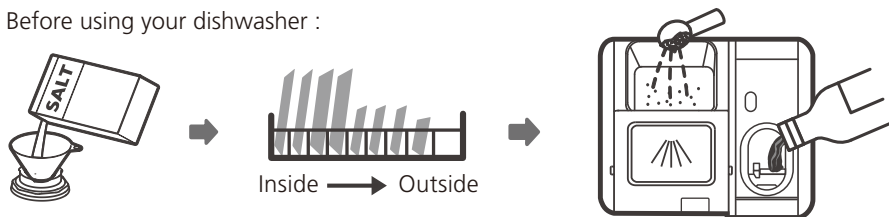

1. Set the water softener
2. Loading the salt Into the softener
3. Loading the basket
4. Fill the detergent dispenser



Please check the section 1 “Water Softener” of PART II : Special Version, if you need to set the water softener .

• Loading The Salt Into The Softener



NOTE:

If your model does not have any water softener, you may skip this section.
Always use salt intended for dishwasher use.
The salt container is located beneath the lower basket and should be filled as explained in the following:

⚠ WARNING


- **Only use salt specifically designed for dishwashers use!**

Every other type of salt not specifically designed for dishwasher use, especially table salt, will damage the water softener. In case of damages caused by the use of unsuitable salt the manufacturer does not give any warranty nor is liable for any damages caused.

- **Only fill with salt before running a cycle.**

This will prevent any grains of salt or salty water, which may have been spilled, remaining on the bottom of the machine for any period of time, which may cause corrosion.

Please follow the steps below for adding dishwasher salt:

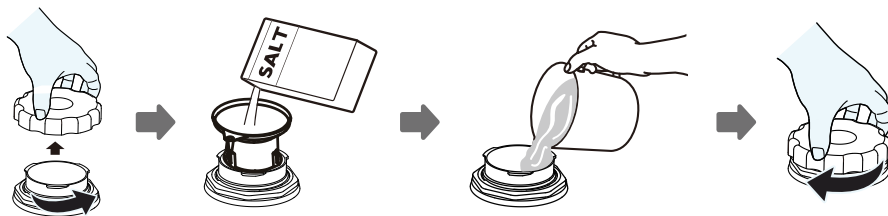

1. Remove the lower basket and unscrew the reservoir cap.
2. Place the end of the funnel (if supplied) into the hole and pour in about 1.5 kg of dishwasher salt.
3. Fill the salt container to its maximum limit with water, It is normal for a small amount of water to come out of the salt container.
4. After filling the container, screw back the cap tightly.
5. The salt warning light will turn off after the salt container has been filled with salt.
6. Immediately after filling the salt into the salt container, a washing program should be started (We suggest to use a short program). Otherwise the filter system, pump or other important parts of the machine may be damaged by salty water. This is out of warranty.

NOTE:

- The salt container must only be refilled when the salt warning light () in the control panel comes on. Depending on how well the salt dissolves, the salt warning light may still be on even though the salt container is filled. If there is no salt warning light in the control panel (for some models), you can estimate when to fill the salt into the softener by the cycles that the dishwasher has run.
- If salt has spilled, run a soak or quick program to remove it.


Basket Loading Tips

Adjusting the upper basket


Type 1:

The height of the upper basket can be easily adjusted to accommodate taller dishes in either the upper or lower basket.


To adjust the height of the upper rack, follow these steps:

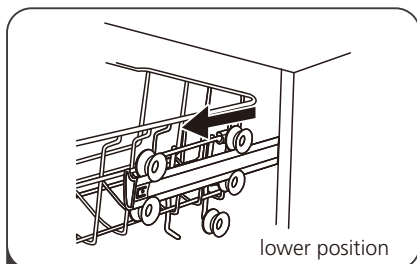


1 Pull out the upper basket.

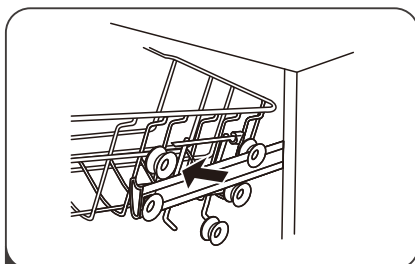

2 Remove the upper basket.

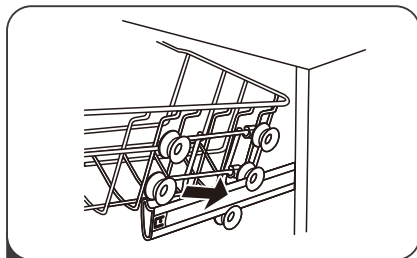


3 Re-attach the upper basket to upper or lower rollers.

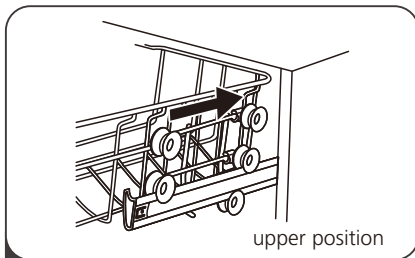


4 Push in the upper basket.

Type 2:

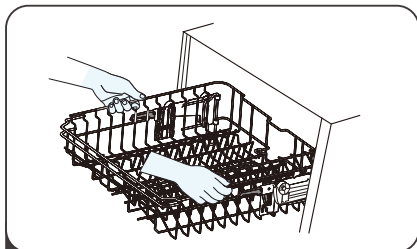

- 1** To raise the upper basket, just lift the upper basket at the center of each side until the basket locks into place in the upper position. It is not necessary to lift the adjuster handle.

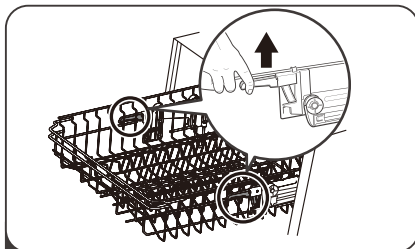

- 2** To lower the upper basket, lift the adjust handles on each side to release the basket and lower it to the lower position.


Folding back the cup shelves

To make room for taller items in the upper basket, raise the cup rack upwards. You can then lean the tall glasses against it.



Folding back the rack shelves

The spikes of the lower basket are used for holding plates and a platter. They can be lowered to make more room for large items.

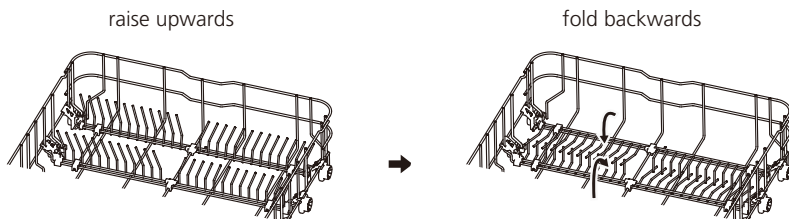

MAINTENANCE AND CLEANING

External Care

The door and the door seal

Clean the door seals regularly with a soft damp cloth to remove food deposits. When the dishwasher is being loaded, food and drink residues may drip onto the sides of the dishwasher door. These surfaces are outside the wash cabinet and are not accessed by water from the spray arms. Any deposits should be wiped off before the door is closed.

The control panel

If cleaning is required, the control panel should be wiped with a soft damp cloth only.

WARNING

- To avoid penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.
- Never use abrasive cleaners or scouring pads on the outer surfaces because they may scratch the finish. Some paper towels may also scratch or leave marks on the surface.


Internal Care

Filtering system


The filtering system in the base of the wash cabinet retains coarse debris from the washing cycle, including foreign objects such as tooth picks or shards. The collected coarse debris may cause the filters to clog. Check the condition of the filters regularly, carefully remove foreign objects and clean the parts of the filtering system if necessary with water. Follow the steps below to clean the filter.

NOTE:


Pictures are only for reference, different models of the filtering system and spray arms may be different.

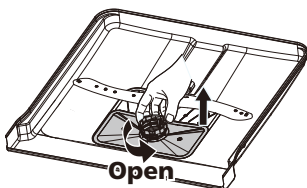


- 1 Hold the coarse filter and rotate it anticlockwise to unlock the filter. Lift the filter upwards and out of the dishwasher.

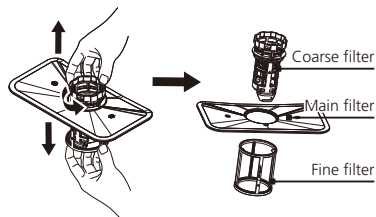

- 2 The fine filter can be pulled off the bottom of the filter assembly. The coarse filter can be detached from the main filter by gently squeezing the tabs at the top and pulling it away.

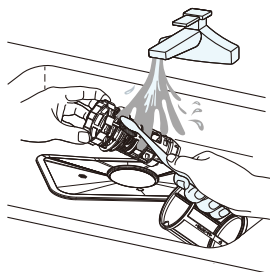

- 3 Larger food remnants can be cleaned by rinsing the filter under running water. For a more thorough clean, use a soft cleaning brush.

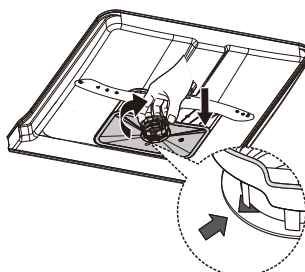

- 4 Reassemble the filters in the reverse order of the disassembly, replace the filter insert, and rotate clockwise to the close arrow.


⚠ WARNING

- Do not over tighten the filters. Put the filters back in sequence securely, otherwise coarse debris could get into the system and cause a blockage.
- Never use the dishwasher without filters in place. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.


Spray arms

It is necessary to clean the spray arms regularly for hard water chemicals will clog the spray arm jets and bearings.


To clean the spray arms, follow the instructions below:

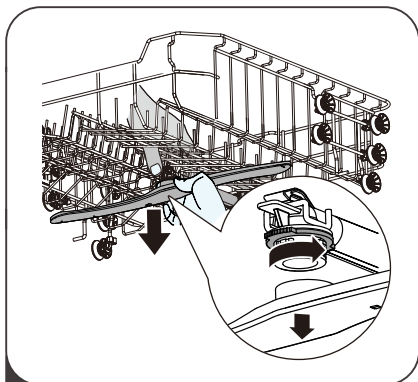

- 1** To remove the upper spray arm, hold the nut in the center still and rotate the spray arm counterclockwise to remove it.

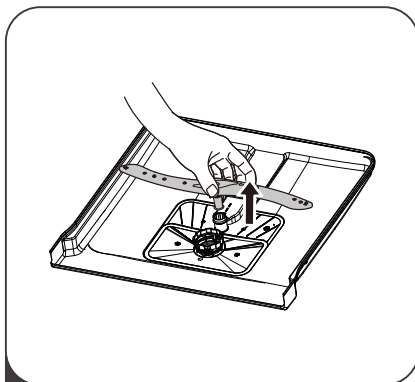

- 2** To remove the lower spray arm, pull out the spray arm upward.

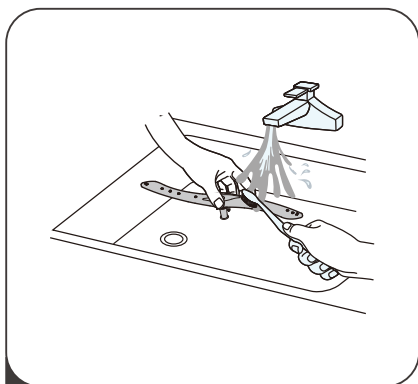

- 3** Wash the arms in soapy and warm water and use a soft brush to clean the jets.

Caring For The Dishwasher

Frost precaution

Please take frost protection measures on the dishwasher in winter. Every time after washing cycles, please operate as follows:

1. Cut off the electrical power to the dishwasher at the supply source.
2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
3. Drain the water from the inlet pipe and water valve. (Use a pan to gather the water)
4. Reconnect the water inlet pipe to the water valve.
5. Remove the filter at the bottom of the tub and use a sponge to soak up water in the sump.

After every wash

After every wash, turn off the water supply to the appliance and leave the door slightly open for a while so that moisture and odors are not trapped inside.

Remove the plug

Before cleaning or performing maintenance, always remove the plug from the socket.

No solvents or abrasive cleaning

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm soapy water.

To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little vinegar, or a cleaning product made specifically for dishwashers.

When not in use for a long time

It is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last longer and prevent odors from forming within the appliance.

Moving the appliance

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

Seals

One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

INSTALLATION INSTRUCTION

⚠ WARNING



Electrical Shock Hazard

Disconnect electrical power before installing dishwasher.
Failure to do so could result in death or electrical shock.

⚠ Attention

The installation of the pipes and electrical equipments should be done by professionals.

About Power Connection

⚠ WARNING

For personal safety:

- Do not use an extension cord or an adapter plug with this appliance.
- Do not, under any circumstances, cut or remove the earthing connection from the power cord.

Electrical requirements

Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10A/13A/16A, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

Electrical connection

Ensure the voltage and frequency of the power being corresponds to those on the rating plate. Only insert the plug into an electrical socket which is earthed properly. If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the socket, rather than using a adaptors or the like as they could cause overheating and burns.


⚠ Ensure that proper earthing exists before use

Water Supply And Drain

Cold water connection

Connect the cold water supply hose to a threaded 1/2(inch) connector and make sure that it is fastened tightly in place.

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear. This precaution is needed to avoid the risk of the water inlet to be blocked and damage the appliance.

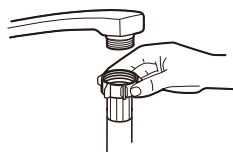

ordinary supply hose



safety supply hose

About the safety supply hose

The safety supply hose consists of the double walls. The system guarantees its intervention by blocking the flow of water in case of the supply hose breaking and when the air space between the supply hose itself and the outer corrugated hose is full of water.

⚠ WARNING

A hose that attaches to a tap can burst if it is installed on the same water line as the dishwasher. If your sink has one, it is recommended that the hose be disconnected and the hole plugged.

How to connect the safety supply hose

1. Pull the safety supply hoses out from storage compartment located at rear of dishwasher.
2. Tighten the screws of the safety supply hose to the faucet with thread 3/4inch.
3. Turn the water fully on before starting the dishwasher.


How to disconnect the safety supply hose

1. Turn off the water.
2. Unscrew the safety supply hose from the faucet.

• Connection Of Drain Hoses

Insert the drain hose into a drain pipe with a minimum diameter of 4 cm, or let it run into the sink, making sure to avoid bending or crimping it. The height of drain pipe must be less than 1000 mm. The free end of the hose must not be immersed in water to avoid the back flow of it.

⚠ Please securely fix the drain hose in either position A or position B

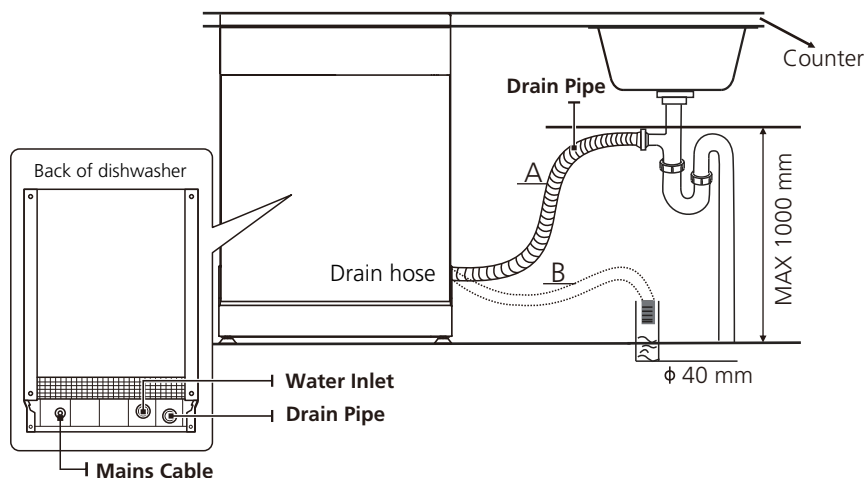

How to drain excess water from hoses

If the connection to the drain pipe is positioned higher than 1000 mm, excess water may remain in the drain hose. It will be necessary to drain excess water from the hose into a bowl or suitable container that is held outside and lower than the sink.

Water outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water drain hose is not kinked or squashed.

Extension hose

If you need a drain hose extension, make sure to use a similar drain hose. It must not be longer than 4 meters, otherwise the cleaning effect of the dishwasher could be reduced.

Syphon connection


The waste connection must be at a height less than 1000 mm (maximum) from the bottom of the dishwasher.

Positioning The Appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned either to the right or the left sides to facilitate proper installation.

Levelling the appliance

Once the appliance is positioned for levelling, the height of the dishwasher may be altered via adjustment of the screwing level of the feet. In any case, the appliance should not be inclined more than 2°.

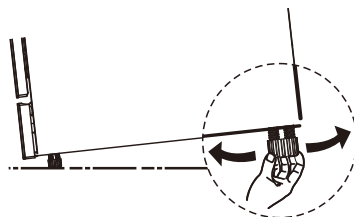


Built-In Installation (for the integrated model)


Step 1. Selecting the best location for the dishwasher The installation position of the dishwasher should be near the existing inlet and drain hose and power socket.

Illustrations of cabinet dimensions and installation position of the dishwasher.

1. Less than 5 mm between the top of dishwasher and cabinet and the outer door aligned to cabinet.

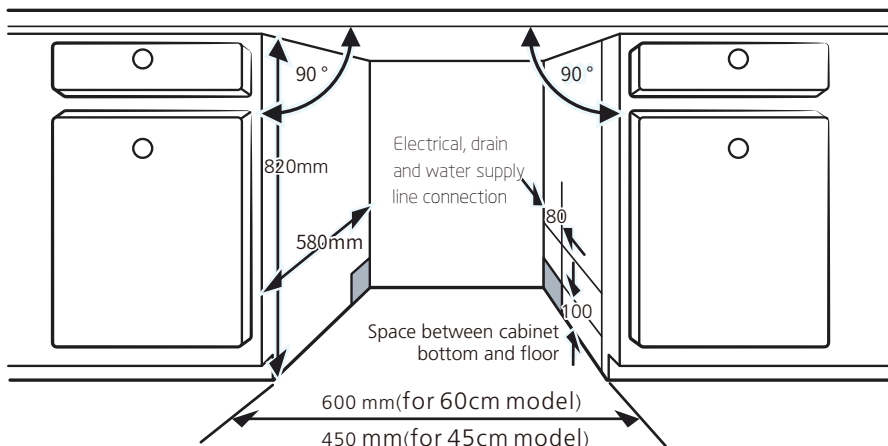

2. If dishwasher is installed at the corner of the cabinet, there should be some space when the door is opened.

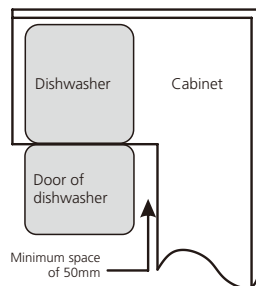

NOTE:



Depending on where your electrical outlet is, you may need to cut a hole in the opposite cabinet side.

Step 2. Aesthetic panel's dimensions and installation



Follow the specific installation instruction for attaching the aesthetical door panel.

Install the hook on the aesthetic panel (see figure 4A) and put the hook into the slot of the outer door of dishwasher (see figure 4B). After positioning of the panel, press top of the aesthetic panel to make sure that the plastic hook are fastened.

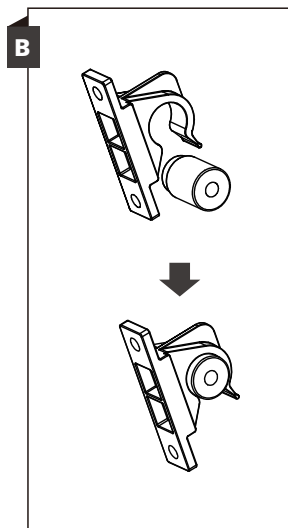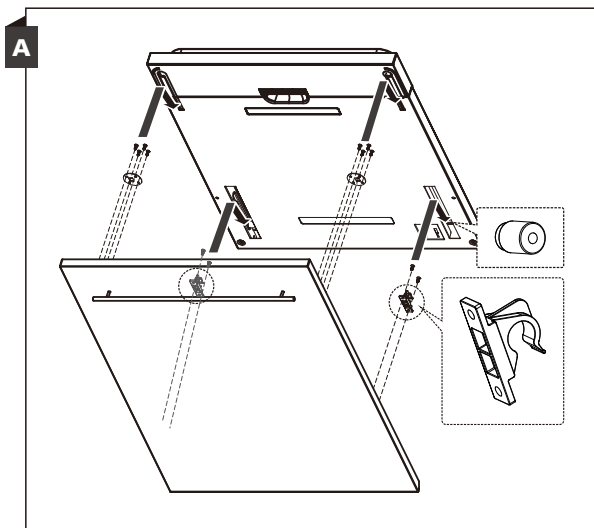


Step 3. Dishwasher installation steps



Please refer to the specific installation steps in the installation drawings.


1. Affix the condensation strip under the work surface of cabinet. Please ensure the condensation strip is flush with edge of work surface. (Step 2)
2. Connect the inlet hose to the cold water supply.
3. Connect the drain hose.
4. Connect the power cord.
5. Place the dishwasher into the cabinet.
6. Level the dishwasher. The rear foot can be adjusted from the front of the dishwasher by turning the Philips screw in the middle of the base of dishwasher use a Philips screw driver. To adjust the front feet, use a flat screw driver and turn the front feet until the dishwasher is level. (Step 5 to Step 6)
7. Install the furniture door to the outer door of the dishwasher. (Step 7 to Step 9)
8. The dishwasher must be secured in place. There are two ways to do this:
 - A. Normal work surface: Put the installation hook into the slot of the side plane and secure it to the work surface with the screws.
 - B. Marble or granite work top: Fix the side with screws.

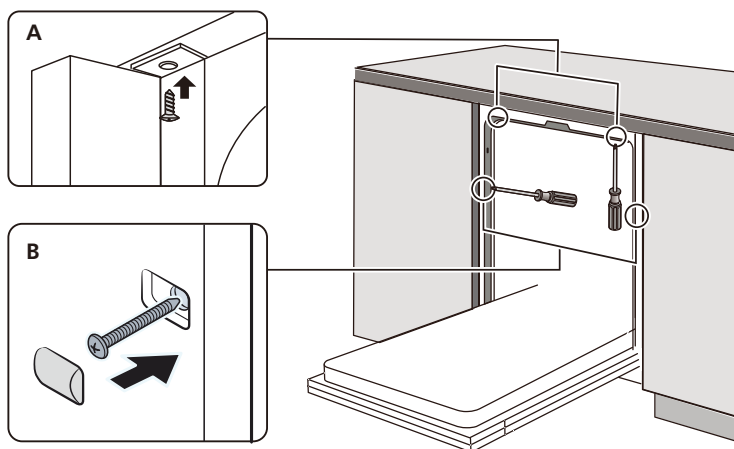

Step 4. Levelling the dishwasher

Dishwasher must be level for proper dish rack operation and wash performance.

1. Place a spirit level on door and rack track inside the tub as shown to check that the dishwasher is level.
2. Level the dishwasher by adjusting the three levelling feet individually.
3. When level the dishwasher, please pay attention not to let the dishwasher tip over.

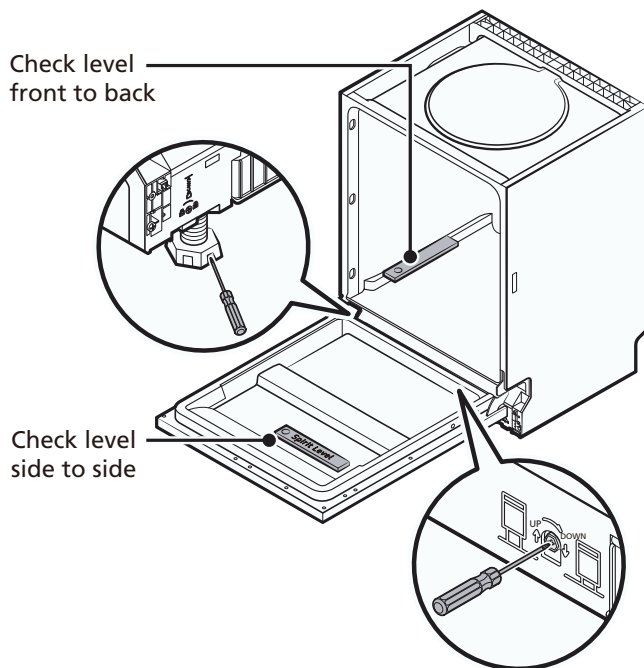

NOTE:

The maximum adjustment height of the feet is 50 mm.

|| TROUBLESHOOTING TIPS

Before Calling For Service

Reviewing the charts on the following pages may save you from calling for service.

Problem	Possible Causes	What To Do
Dishwasher doesn't start	Fuse blown, or the circuit break tripped.	Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher.
	Power supply is not turned on.	Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket.
	Water pressure is low	Check that the water supply is connected properly and the water is turned on.
	Door of dishwasher not properly closed.	Make sure to close the door properly and latch it.
Water not pumped form dishwasher	Twisted or trapped drain hose.	Check the drain hose.
	Filter clogged.	Check the filter system.
	Kitchen sink clogged.	Check the kitchen sink to make sure it is draining well. If the problem is the kitchen sink that is not draining , you may need a plumber rather than a serviceman for dishwashers.
Foam in the tub	Wrong detergent.	Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 liter of cold water to the bottom of the dishwasher. Close the dishwasher door, then select any cycle. Initially, the dishwasher will drain out the water. Open the door after draining stage is complete and check if the suds have disappeared. Repeat if necessary.

Problem	Possible Causes	What To Do
	Spilled rinse aid.	Always wipe up rinse aid spills immediately.
Stained tub interior	Detergent with colourant may have been used.	Make sure that the detergent has no colourant.
White film on inside surface	Hard water minerals.	To clean the interior, use the damp soft cloth with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent otherwise, it may cause foaming or suds.
There are rust stains on cutlery	The affected items are not corrosion resistant.	Avoid washing items that are not corrosion resistant in the dishwasher.
	A program was not run after dishwasher salt was added. Traces of salt have gotten into the wash cycle.	Always run a wash program without any crockery after adding salt. Do not select the Turbo function (if present), after adding dishwasher salt.
	The lid of the softer is loose.	Check the softener lid is secure.
Knocking noise in the dishwasher	A spray arm is knocking against an item in a basket	Interrupt the program and rearrange the items which are obstructing the spray arm.
Rattling noise in the dishwasher	Items of crockery are loose in the dishwasher.	Interrupt the program and rearrange the items of crockery.
Knocking noise in the water pipes	This may be caused by on-site installation or the cross-section of the piping.	This has no influence on the dishwasher function. If in doubt, contact a qualified plumber.
The dishes are not clean	The dishes were not loaded correctly.	See PART II "Preparing And Loading Dishes".
	The program was not powerful enough.	Select a more intensive program.

Problem	Possible Causes	What To Do
The dishes are not clean.	Not enough detergent was dispensed.	Use more detergent, or change your detergent.
	Items are blocking the movement of the spray arms.	Rearrange the items so that the spray can rotate freely.
	The filter combination is not clean or is not correctly fitted in the base of wash cabinet. This may cause the spray arm jets to get blocked.	Clean and/or fit the filter correctly. Clean the spray arm jets.
Cloudiness on glassware.	Combination of soft water and too much detergent.	Use less detergent if you have soft water and select a shorter cycle to wash the glassware and to get them clean.
White spots appear on dishes and glasses.	Hard water area can cause limescale deposits.	Check water softener settings or fill status of salt container.
Black or grey marks on dishes	Aluminium utensils have rubbed against dishes	Use a mild abrasive cleaner to eliminate those marks.
Detergent left in dispenser	Dishes block detergent dispenser	Re-loading the dishes properly.
The dishes aren't drying	Improper loading	Use gloves if detergent residue can be found on dishes to avoid skin irritations.
	Dishes are removed too soon	Do not empty your dishwasher immediately after washing. Open the door slightly so that the steam can come out. Take out the dishes until the inside temperature is safe to touch. Unload the lower basket first to prevent the dropping water from the upper basket.

Problem	Possible Causes	What To Do
The dishes aren't drying	Wrong program has been selected.	With a short program, the washing temperature is lower, decreasing cleaning performance. Choose a program with a long washing time.
	Use of cutlery with a low-quality coating.	Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher.


WARNING

Self-repair or non-professional repair may cause serious risks to the safety of the user of the appliance and impact warranty.

LOADING THE BASKETS ACCORDING TO EN50242:


Loading the dishwasher to its full capacity will contribute to energy and water savings.

1.Upper basket:

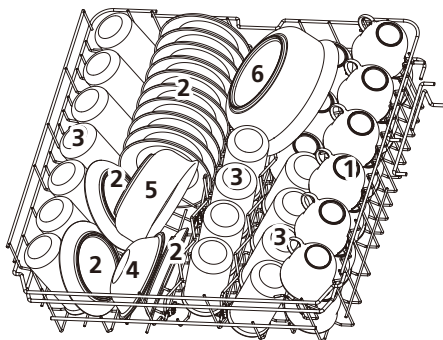



Number	Item
1	Cups
2	Saucers
3	Glasses
4	Small serving bowl
5	Medium serving bowl
6	Large serving bowl

2.Lower basket:

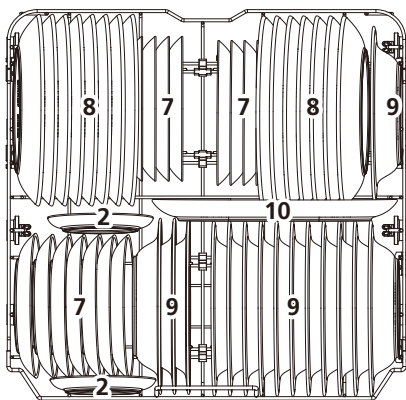

Number	Item
7	Dessert plates
8	Dinner plates
9	Soup plates
10	Oval platter


3.Cutlery rack:

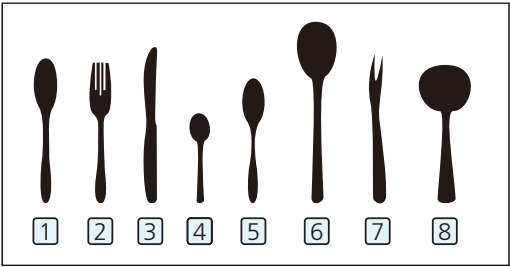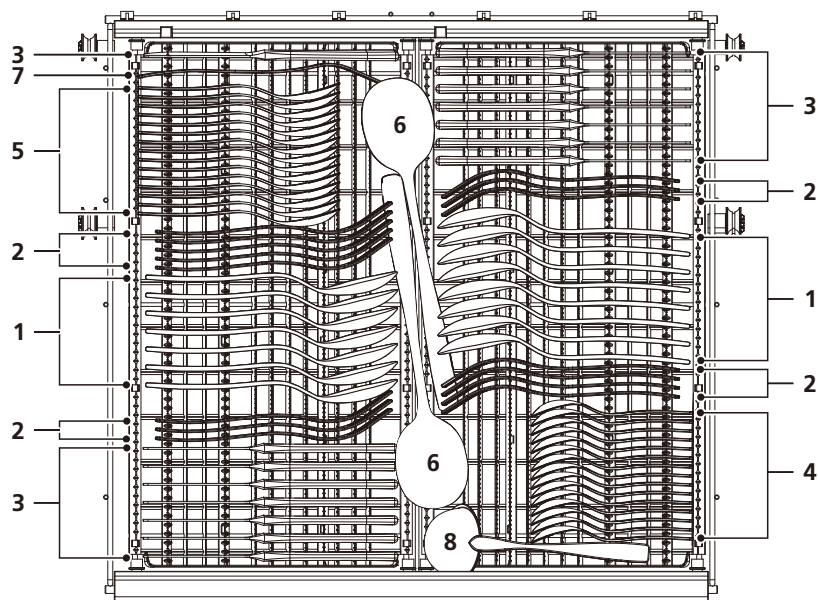


Information for comparability
tests in accordance with EN50242
Capacity: 15 place settings
Position of the upper basket: lower position
Program: ECO
Rinse aid setting: Max
Softener setting: H3

Number	Item
1	Soup spoons
2	Forks
3	Knives
4	Tea spoons
5	Dessert spoons
6	Serving spoons
7	Serving fork
8	Gravy ladle


Cutlery Rack Used Tips

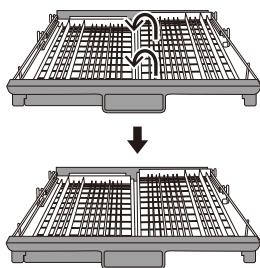


Lift the right basket up, both left and right baskets are flat.

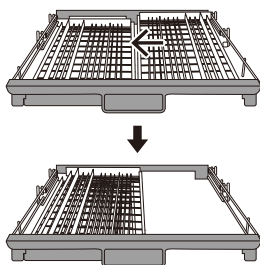

Move the right basket from right to left, two basket are overlapping.

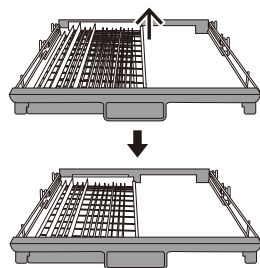

Remove the right basket from the tray, only has the left basket.

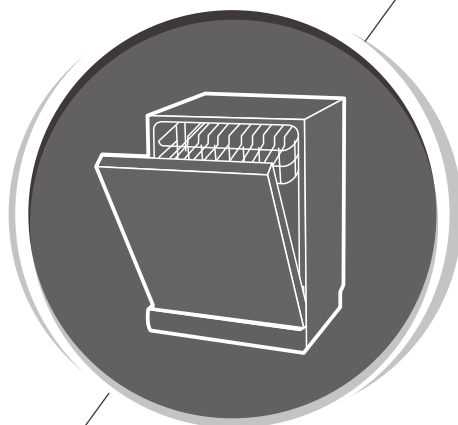

Dishwasher Instruction Manual

PART II: Special Version
MDW14-7713AD



Please read this manual carefully
before using the dishwasher and
Keep this manual for future reference.

CONTENTS

01	4	USING YOUR DISHWASHER
	4	Control Panel
	7	Water Softener
	8	Preparing And Loading Dishes
	11	Function Of The Rinse Aid And Detergent
	12	Filling The Rinse Aid Reservoir
02	13	Filling The Detergent Dispenser
	14	PROGRAM SELECTION
	14	Wash Cycle Table
	16	Saving Energy
	16	Starting A Program
	16	Changing The Program Mid-cycle
03	17	Forget To Add A Dish?
	18	Auto Open
04	18	ERROR CODES
	19	TECHNICAL INFORMATION




NOTE:

- If you cannot solve the problems by yourself, please ask for help from a professional technician.
- The manufacturer, following a policy of constant development and updating of the product, may make modifications without giving prior notice.
- If lost or out-of-date, you can receive a new user manual from the manufacturer or responsible vendor.

QUICK USER GUIDE


Please read the corresponding content in the instruction manual for detailed operating method.

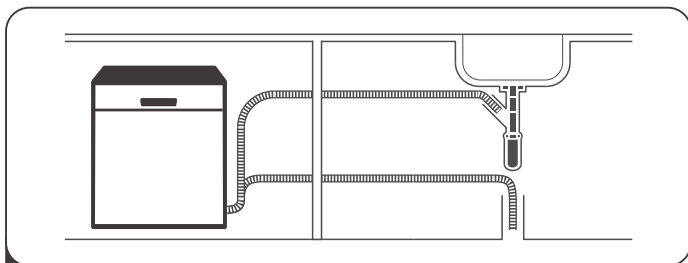


- 1 Install the dishwasher
(Please check the section 5 “INSTALLATION INSTRUCTION” of PART I : Generic Version.)



- 2 Remove larger residue from dishes.
Avoid pre-rinsing.

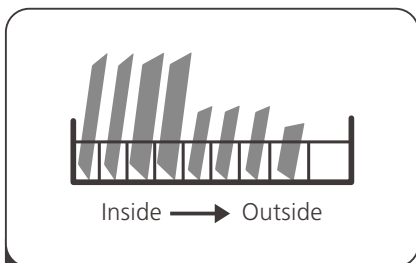

- 3 Load the baskets.

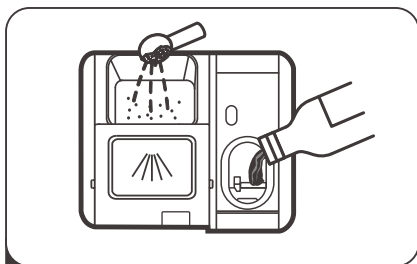


- 4 Fill the dispenser with detergent and rinse aid.



- 5 Select a suitable program and start the dishwasher.

USING YOUR DISHWASHER

Control Panel

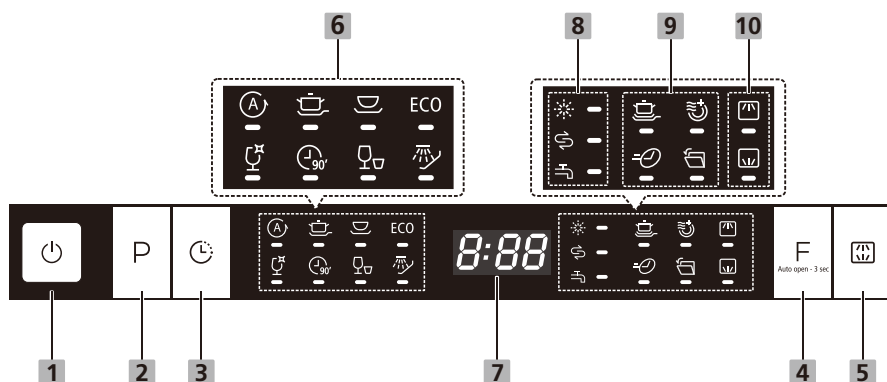

Operation (Button)

1 Power	Press this button to turn on your dishwasher.
2 Program	Press this button to select the appropriate washing program, the program indicator will be lit.
3 Delay	Press the Delay button to increase the delay start time. Delay a cycle for up to 24 hours in one-hour increments. After setting the delay time, close the door to start.
4 Function	Press the button to select a function, corresponding indicator will be lit.
5 Alt	Press the button to select either upper basket or lower basket loaded, and the response indicators will be lit.

Display

6 Program indicator	 Auto Auto sensing wash, lightly, normally or heavily soiled crockery, with or with out dried-on food.
----------------------------	--

Display

6 Program indicator	 Intensive For heaviest soiled crockery, and normally soiled pots, pans, dishes etc. with dried-on food.  Universal For normally soiled loads, such as pots, plates, glasses and lightly soiled pans. ECO ECO This is standard program, it is suitable to clean normally soiled tableware and it is the most efficient program in terms of its combined energy and water consumption for that type of tableware.  Glass For lightly soiled crockery and glass.  90 min For normally soiled loads that need quick wash.  Rapid A shorter wash for lightly soiled loads that do not need drying.  Soak To rinse dishes that you plan to wash later that day.
7 Screen	 To show the remaining program time and delay time, error code etc.
8 Warning Indicator	 Rinse Aid If the " ✨ " indicator is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill.  Salt If the " ⚖️ " indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled.  Water Faucet If the " 🚰 " indicator is lit, it means that no water is reaching the dishwasher.

Display

9 Function indicator	Power wash To wash very dirty, hard to clean dishes. (It can only be used with Intensive, Universal, ECO, Glass, 90 min.)
-----------------------------	---

Water Softener

The water softener must be set manually, using the water hardness dial.

The water softener is designed to remove minerals and salts from the water, which would have a detrimental or adverse effect on the operation of the appliance.

The more minerals there are, the harder your water is.

The softener should be adjusted according to the hardness of the water in your area.

Your local Water Authority can advise you on the hardness of the water in your area.

Adjusting salt consumption

The dishwasher is designed to allow for adjustment in the amount of salt consumed based on the hardness of the water used. This is intended to optimise and customise the level of salt consumption.

Please follow the steps below for adjustment in salt consumption.

1. **Open** the door, switch on the appliance;
2. Within 60 seconds after the appliance was switched on press the **program button** for more than 5 seconds to enter the water softener setting mode.
3. Press the **program button** again to select the proper set according to your local environment, the setting will change in the following sequence:
H1->H2->H3->H4->H5->H6;
4. Press the Power button to end the setting mode.

WATER HARDNESS				Water softner level	Regeneration occurs every X program sequence 1)	Salt consumption (gram/cycle)
German °dH	French °fH	British °Clarke	Mmol/l			
0 - 5	0 - 9	0 - 6	0 - 0.94	H1	No regeneration	0
6 - 11	10 - 20	7 - 14	1.0 - 2.0	H2	10	9
12 - 17	21 - 30	15 - 21	2.1 - 3.0	H3	5	12
18 - 22	31 - 40	22 - 28	3.1 - 4.0	H4	3	20
23 - 34	41 - 60	29 - 42	4.1 - 6.0	H5	2	30
35 - 55	61 - 98	43 - 69	6.1 - 9.8	H6	1	60

1° dH=1.25 ° Clarke=1.78 °

fH=0.178mmol/l The factory setting: H3



Please check the section 3 “Loading The Salt Into The Softener” of PART I : Generic Version, If your dishwasher lacks salt.



NOTE:

If your model does not have any water softener, you may skip this section.

Water Softener

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits will form on the dishes and utensils.

The appliance is equipped with a special softener that uses a salt container specifically designed to eliminate lime and minerals from the water.

Preparing And Loading Dishes

- Consider buying utensils which are identified as dishwasher-proof.
- For particular items, select a program with the lowest possible temperature.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the program has ended.

For washing the following cutlery/dishes

Are not suitable

- Cutlery with wooden, horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Pewter or cooper items
- Crystal glass
- Steel items subject to rusting
- Wooden platters
- Items made from synthetic fibres

Are of limited suitability

- Some types of glasses can become dull after a large number of washes
- Silver and aluminum parts have a tendency to discolor during washing
- Glazed patterns may fade if machine washed frequently

Recommendations for loading the dishwasher

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans. It is not necessary to rinse the dishes under running water.

For best performance of the dishwasher, follow these loading guidelines.

(Features and appearance of baskets and cutlery baskets may vary from your model.)

Place objects in the dishwasher in the following way:

- Items such as cups, glasses, pots/pans, etc. must face downwards.
- Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- All utensils are stacked securely and can not tip over.
- All utensils are placed in the way that the spray arms can rotate freely during washing.
- Load hollow items such as cups, glasses, pans etc. With the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other. To avoid damage, glasses should not touch one another.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.
- Long bladed knives stored in an upright position are a potential hazard!
- Long and / or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Please do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.



NOTE:

Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

Removing the dishes

To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first, followed by the upper basket.


⚠ WARNING



Items will be hot! To prevent damage, do not take glass and cutlery out of the dishwasher for around 15 minutes after the program has ended.


Loading the upper basket

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water.



Loading the lower basket

We suggest that you place large and difficult to clean items into the lower basket: such as pots, pans, lids, serving dishes and bowls, as shown in the figure below. It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm.

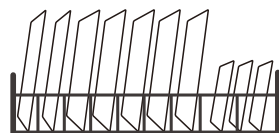

The maximum diameter advised for plates in front of the detergent dispenser is of 19 cm, this not to hamper the opening of it.

Loading the cutlery basket

Cutlery should be placed in the cutlery basket separate from each other in the appropriate positions. Avoid nesting of the cutlery to prevent insufficient cleaning performance.

⚠ WARNING



Do not let any item extend through the bottom.

Always load sharp utensils with the sharp point down!



For the best washing effect, please load the baskets refer to standard loading options on last section of **PART I : Generic Version**

Function Of The Rinse Aid And Detergent

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to run off the dishes. Your dishwasher is designed to use liquid rinse aids.

⚠ WARNING

Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. Dishwasher cleaning agent, liquid detergent). This would damage the appliance.

When to refill the rinse aid

The regularity of the dispenser needing to be refilled depends on how often dishes are washed and the rinse aid setting used.

- The Low Rinse Aid indicator () will be lit when more rinse aid is needed.
- Do not overfill the rinse aid dispenser.

Function of detergent

The chemical ingredients that compose the detergent are necessary to remove, crush and dispense all dirt out of the dishwasher. Most of the commercial quality detergents are suitable for this purpose.

⚠ WARNING

- Proper Use of Detergent


Use only detergent specifically made for dishwashers use. Keep your detergent fresh and dry.

Do not fill detergent into the dispenser until you are ready to start the dishwasher.




Dishwasher detergent is corrosive! Keep dishwasher detergent out of the reach of children.


• Filling The Rinse Aid Reservoir

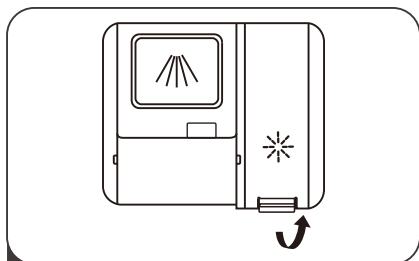

- 1** Remove the rinse reservoir cap by lifting up the handle .

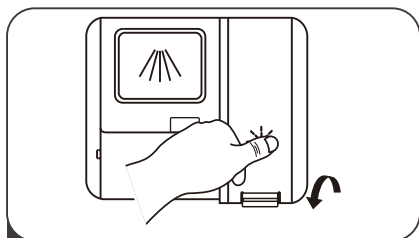

- 3** Close the cap after all.

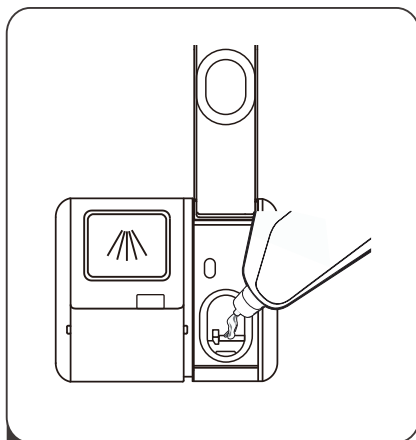


- 2** Pour the rinse aid into the dispenser, being careful not to overfill.

Adjusting the rinse aid reservoir

To achieve a better drying performance with limited rinse aid, the dishwasher is designed to adjust the consumption by user. Follow the below steps.

1. Open the door, switch on the appliance.
2. Within 60 seconds after the appliance was switched on press the program button for more than 5 seconds, and then press the Delay button to enter the set model, the rinse aid indication blinks as 1Hz frequency.
3. Press the Program button again to select the proper set according to your using habits, the setting will change in the following sequence: D1->D2->D3->D4->D5->D1. The higher the number, the more rinse aid the dishwasher uses.
4. Without operation in 5 seconds or press the Power button to complete the setup and exit the setting mode.

Filling The Detergent Dispenser

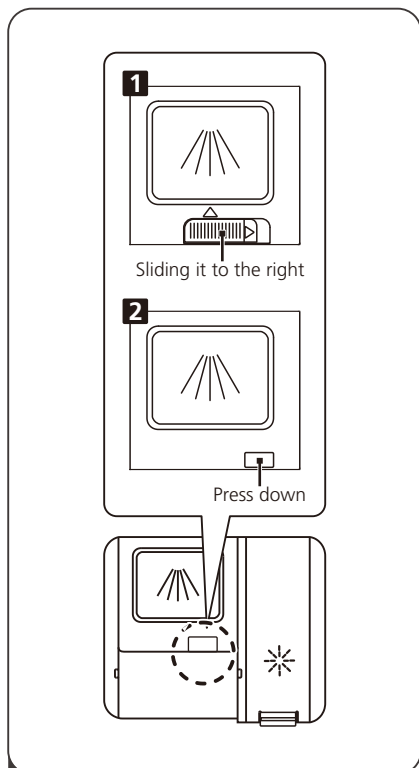


1 Please choose an open way according to the actual situation.

1. Open the cap by sliding the release catch.
2. Open the cap by pressing down the release latch.

NOTE:


Please observe the manufacturer's recommendations on the detergent packaging.

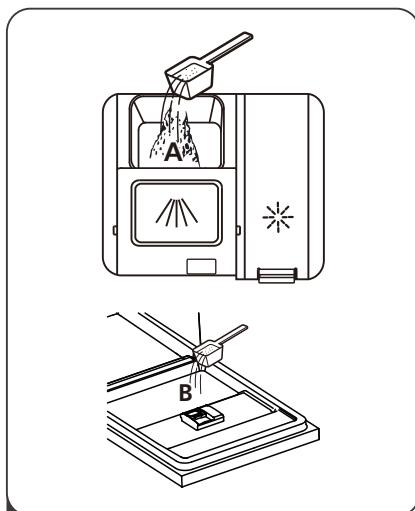

2 Add detergent into the larger cavity (A) for main wash.

For better cleaning result, especially if you have very dirt items, pour a small amount of detergent onto the door.

The additional detergent will activate during the pre-wash phase.

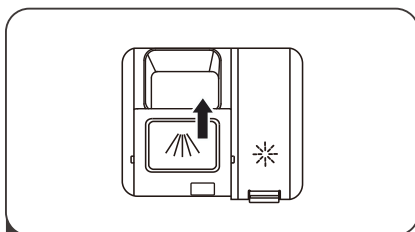

3 Close the flap by sliding it to the front and then pressing it down.

PROGRAM SELECTION

Wash Cycle Table

The table below shows which programs are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programs. Consumption values and program duration are only indicative except for ECO program.

(●) indicates that the program uses rinse aid in the last rinse.

Program	Description Of Cycle	Detergent Pre/Main Wash	Running Time(min)	Energy (kWh)	Water (L)	Rinse Aid
 Auto	Prewash(45°C)					
	Wash(55-65°C)					
	Rinse	5/32.5g	85-150	1.050-1.551	10.6-15.9	●
	Rinse	1 or 2 tabs				
	Rinse(50-55°C)					
	Drying					
 Intensive	Prewash(50°C)					
	Wash(65°C)					
	Rinse	5/32.5g	205	1.651	16.5	●
	Rinse	1 or 2 tabs				
	Rinse(60°C)					
	Drying					
 Universal	Prewash(45°C)					
	Wash(55°C)					
	Rinse	5/32.5g	175	1.451	16.5	●
	Rinse	1 or 2 tabs				
	Rinse(60°C)					
	Drying					
ECO (*EN50242)	Wash(50°C)					
	Rinse	37.5g	210	0.847	10.0	●
	Rinse(50°C)	1 or 2 tabs				
	Drying					
 Glass	Prewash(40°C)					
	Wash(50°C)					
	Rinse	5/32.5g	120	0.902	13.5	●
	Rinse(50°C)	1 or 2 tabs				
	Drying					

Program	Description Of Cycle	Detergent Pre/Main	Running Time(min)	Energy (Kwh)	Water (L)	Rinse Aid
 90 min	Wash(55 °C) Rinse Rinse(50 °C) Drying	$\frac{37.5g}{1 \text{ tab}}$	90	0.891	10.3	●
 Rapid	Wash(40 °C) Rinse(40 °C) Rinse(55 °C)	15g	30	0.781	11.0	○
 Soak	Prewash		15	0.021	4.0	○

NOTE:

ECO : This program is the test cycle. The information for comparability test in (*EN50242) accordance with EN50242.

• **Saving Energy**

1. Pre-rinsing of tableware items leads to increased water and energy consumption and is not recommended.
2. Washing tableware in a household dishwasher usually consumes less energy and water in the use phase than hand dishwashing when the household dishwasher is used according to the instructions.


• **Starting A program**

1. Draw out the lower and upper basket, load the dishes and push them back. It is commended to load the lower basket first, then the upper one.
2. Pour in the detergent.
3. Insert the plug into the socket. The power supply refer to last page "Product fiche". Make sure that the water supply is turned on to full pressure.
4. Open the door, Press the Power button.
5. Choose a program, the response light will turn on. Then close the door, the dishwasher will start its cycle.

• **Changing The Program Mid-cycle**

A program can only be changed if it has been running only for a short period of time, otherwise the detergent may have already been released or the the wash water with detergent has already been drained. If this is the case, the dishwasher needs to be reset and the detergent dispenser must be refilled. To reset the dishwasher, follow the instructions below:

1. Open the door a little to stop the dishwasher, after the spray arm stopped working, you can open the door completely.
2. Press Program button more than three seconds the machine will be in program selection mode.
3. You can change the program to the desired cycle setting.

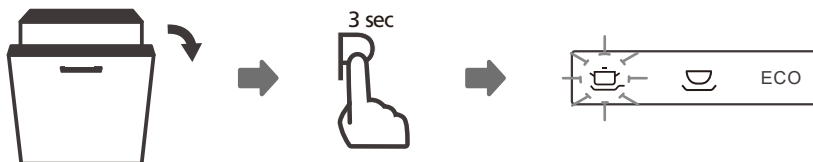

• Forget To Add A Dish?

A forgotten dish can be added any time before the detergent dispenser opens. If this is the case, follow the instructions below:

1. Open the door a little to stop the washing.
2. After the spray arms stopped working, you can open the door completely.
3. Add the forgotten dishes.
4. Close the door.
5. The dishwasher will start running again.



⚠ WARNING



It is dangerous to open the door mid-cycle, as hot steam may scald you.

Auto Open

After washing, the door will open automatically to achieve better drying effect.

 **NOTE:**



ERROR CODES


If there is a malfunction the dishwasher will display an error code. The following table shows possible error codes and their causes.

Codes	Meanings	Possible Causes
E1	Longer inlet time.	Faucets is not opened, or water intake is restricted, or water pressure is too low.
E3	Not reaching required temperature.	Malfunction of heating element.
E4	Overflow.	Some element of dishwasher leaks.
E8	Failure of orientation of distributary valve.	Open circuit or break of distributary valve.
E9	Keep pressing a button more than 30 seconds.	Water or something on the button.
Ed	Failure of communication between main circuit board with display circuit board.	Open circuit or break wiring for the communication.

WARNING

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.
- If there is an error code that cannot be solved, please request professional assistance.

TECHNICAL INFORMATION

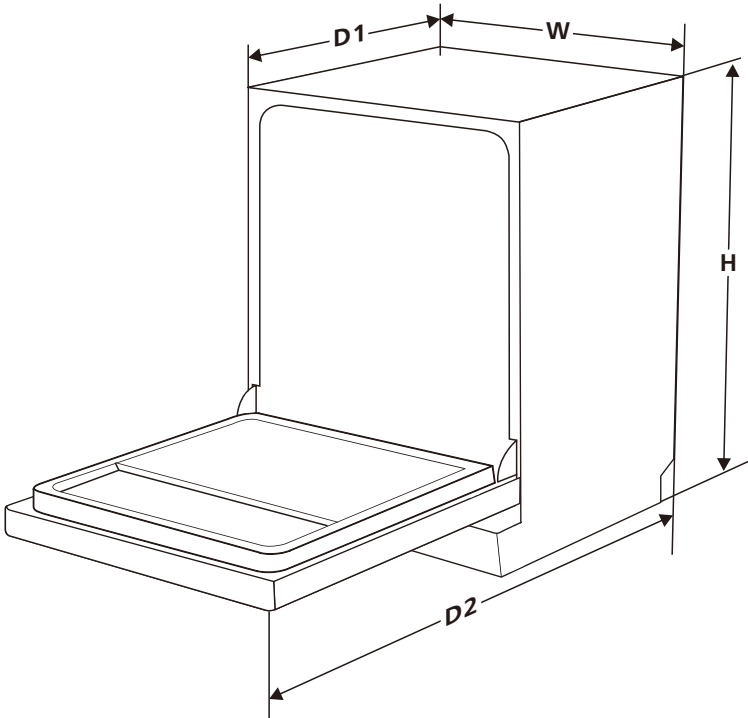

Height (H)	815mm
Width (W)	598mm
Depth (D1)	550mm (with the door closed)
Depth (D2)	1150mm (with the door opened 90°)


Product fiche

Sheet of household dishwasher according to EU Directive 1016/2010 & 1059/2010:

Manufacturer	MALLOCA
Type / Description	MDW14-7713AD
Standard place settings	15
Energy efficiency class ①	A+++
Annual energy consumption ②	241kWh
Energy consumption of the standard cleaning cycle	0,847 kWh
Power consumption of off-mode	0,45 W
Power consumption of left-on mode	0,49W
Annual water consumption ③	2800 liter
Drying efficiency class ④	A
Standard cleaning cycle ⑤	ECO 50°C
Program duration of the standard cleaning cycle	210 min
Noise level	44 dB(A) re 1 pW
Mounting	Built - in
Could be built-in	YES
Power consumption	1760-2100W
Rated voltage / frequency	220-240V/50Hz
Water pressure (flow pressure)	0,04-1,0MPa=0,4-10 bar

NOTE:

- ①** A + + + (highest efficiency) to D (lowest efficiency)
- ②** Energy consumption based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption will depend on how the appliance is used.
- ③** Water consumption based on 280 standard cleaning cycles. Actual water consumption will depend on how the appliance is used.
- ④** A (highest efficiency) to G (lowest efficiency)
- ⑤** This program is suitable for cleaning soiled normally soiled tableware and that it is the most efficient program in terms of its combined energy and water consumption for that type of tableware.

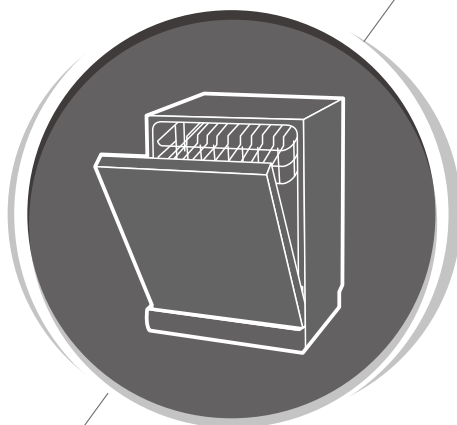

MÁY RỬA CHÉN

HƯỚNG DẪN SỬ DỤNG

Phần I: Phiên bản chung

MDW14-7713AD



Vui lòng đọc kỹ hướng dẫn trước khi sử dụng máy rửa chén và giữ lại để tham khảo về sau

CONTENTS

01	03	THÔNG TIN AN TOÀN
02	08	TỔNG QUAN SẢN PHẨM
03	09	SỬ DỤNG MÁY RỬA CHÉN
	09	Thêm muối làm mềm nước Mẹo
	11	sắp xếp chén đĩa
04	13	VỆ SINH VÀ BẢO TRÌ
	13	Vệ sinh bên ngoài
	13	Vệ sinh bên trong
	16	Bảo dưỡng máy rửa chén
05	17	HƯỚNG DẪN LẮP ĐẶT
	17	Kết nối nguồn điện
	18	Cấp và thoát nước
	19	Kết nối ống thoát nước Lắp
	20	đặt thiết bị
	20	Lắp đặt âm tủ (dành cho mẫu âm tủ)
06	24	MẸO XỬ LÝ SỰ CỐ
	27	Phụ kiện thay thế sẵn có
07	28	SẮP XẾP CHÉN ĐĨA TRÊN CÁC RỎ
	30	Mẹo sử dụng giá để muỗng nĩa



GHI CHÚ:

- Xem lại phần mẹo khắc phục sự cố sẽ giúp bạn giải quyết được một số vấn đề thường gặp.
- Nếu bạn không thể tự giải quyết được vấn đề, hãy liên hệ với dịch vụ kỹ thuật.
- Nhà sản xuất tuân theo chính sách phát triển liên tục và cập nhật sản phẩm mà không cần báo trước.
- Nếu bị mất hoặc lỗi thời, bạn có thể nhận được hướng dẫn sử dụng mới từ nhà sản xuất hoặc nhà cung cấp được ủy quyền.

THÔNG TIN AN TOÀN

⚠ CẢNH BÁO

Khi sử dụng máy rửa chén của bạn, hãy làm theo các bước phòng ngừa dưới đây:

- Việc lắp đặt và sửa chữa phải được thực hiện bởi nhân viên kỹ thuật.
- Thiết bị này được thiết kế để được sử dụng trong các hộ gia đình và các ứng dụng tương tự như:
 - Khu vực nhà bếp nhân viên trong các cửa hàng, văn phòng và môi trường làm việc;
 - Nhà dân dụng;
 - Nhà nghỉ, khách sạn, ...
- Thiết bị này chỉ có thể được sử dụng bởi trẻ em từ 8 tuổi trở lên và những người không có khả năng thể chất, giác quan hoặc tâm thần hoặc thiếu kinh nghiệm và kiến thức cần được giám sát hoặc hướng dẫn sử dụng thiết bị trong một cách an toàn và hiểu được những tác hại nguy hiểm.
- Trẻ em không được sử dụng thiết bị này. Làm sạch và bảo trì sử dụng sẽ không được thực hiện bởi trẻ em mà không cần giám sát. (Đối với EN60335-1)
- Vật liệu bao gói có thể gây nguy hiểm cho trẻ em!
- Thiết bị này thiết kế để sử dụng cho hộ gia đình.
- Để bảo vệ an toàn tránh nguy cơ điện giật, không để các bộ phận, dây điện và phích cắm tiếp xúc với nước hoặc các chất lỏng khác.
- Hãy rút phích cắm trước khi vệ sinh và bảo trì thiết bị.

- Sử dụng một miếng vải ẩm, mềm với chút xà bông, và sau đó sử dụng một miếng vải khô để lau lại.

Hướng dẫn nối đất


- Thiết bị này cần phải được nối đất. Trong trường hợp trục trặc hay sự cố, thiết bị được nối đất giảm nguy cơ bị điện giật. Thiết bị được trang bị một dây dẫn kết nối thiết bị và nối đất.
- Phích cắm của thiết bị cần được cắm vào ổ điện thích hợp và phù hợp với yêu cầu an toàn địa phương.
- Kết nối dây nối đất không đúng cách dẫn đến nguy cơ bị điện giật.
- Nếu bạn nghi ngờ thiết bị không kết nối đất đúng cách, vui lòng liên hệ với kỹ thuật viên hoặc trung tâm bảo hành.
- Không thay đổi phích cắm cung cấp thiết bị; Nếu phích cắm không phù hợp với ổ cắm.
- Vui lòng liên hệ với nhân viên kỹ thuật để thay đổi phích cắm sao cho phù hợp.
- Không được ngồi, hoặc đứng trên cửa hoặc các thanh trượt của máy rửa chén.
- Không hoạt động máy rửa chén khi chén đĩa chưa đặt đúng vị trí khay đựng.
- Mở cửa rất cẩn thận nếu máy rửa chén đang hoạt động, có thể có nước tràn ra ngoài.

- Không đặt bất kỳ vật nặng lên hoặc đứng trên cánh cửa khi được mở. Thiết bị có thể bị đổ về phía trước.
- Khi thiết bị đang hoạt động:
 - 1) Đặt các vật sắc nhọn sao cho chúng không làm hỏng gioăng cửa;
 - 2) Cảnh báo: Dao và đồ dùng sắc nhọn phải được để trong giỏ, hoặc được đặt nằm ngang.
- Một số chất tẩy rửa có tính kiềm mạnh. Chúng có thể vô cùng nguy hiểm nếu nuốt phải. Tránh tiếp xúc vào da và mắt, giữ trẻ em tránh xa máy rửa chén khi cửa mở.
- Kiểm tra xem xà phòng rửa chén còn hay hết sau mỗi chu kỳ rửa.
- Không rửa các vật liệu bằng nhựa trừ khi chúng được đánh dấu "an toàn với máy rửa chén" hoặc tương đương.
- Đối với các mặt hàng nhựa chưa được đánh dấu, kiểm tra khuyến nghị của nhà sản xuất.
- Chỉ sử dụng chất tẩy rửa khuyến cáo sử dụng cho máy rửa chén.
- Không sử dụng xà phòng, bột giặt hoặc xà phòng rửa tay cho máy rửa chén của bạn.
Cửa không nên để mở vì có thể gây nguy hiểm.
- Nếu dây nguồn bị hư hỏng, nó phải được thay thế bởi trung tâm bảo hành hoặc đại lý dịch vụ của mình hoặc nhân viên kỹ thuật để tránh gây nguy hiểm.

- Trong khi lắp đặt thiết bị, dây cấp nguồn cần phải thẳng và không bị gấp khúc.
- Không làm xáo trộn các bộ phận điều khiển.
- Thiết bị phải được nối với nguồn nước bằng bộ ống mới và không nên tái sử dụng các bộ ống cũ.
- Để tiết kiệm năng lượng, khi ở chế độ chờ, nếu không có bất kỳ hoạt động nào trong 30 phút, thiết bị sẽ tự động tắt.
- Số lượng bộ chén đĩa được rửa tối đa sẽ là 15 bộ.
- Áp lực nước từ 0.04MPa - 1MPa.

• Xử lý

- Để xử lý vật liệu bao gói và thiết bị vui lòng liên hệ với trung tâm tái chế, hãy cắt dây cáp nguồn và vô hiệu hóa thiết bị. Bao bì carton được sản xuất từ giấy tái chế, vì vậy nên được xử lý giấy thải để

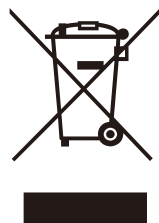

- tái chế.

Đảm bảo thiết bị được xử lý đúng cách, bạn sẽ giúp ngăn chặn các hậu quả tiêu cực tiềm ẩn về môi

- trường cũng như sức khỏe của con người, nếu không có thể gây ra những hậu quả bởi việc xử lý thiết bị này không đúng cách.

Để biết thông tin chi tiết hơn về tái chế các sản phẩm này, xin vui lòng liên hệ với văn phòng địa

- phương và các dịch vụ xử lý chất thải hộ gia đình của bạn.



XỬ LÝ: Không vứt bỏ sản phẩm này như rác

- **thải đô thị chưa phân loại. Thu gom chất thải như vậy một cách riêng biệt để xử lý đặc biệt là cần thiết.**


TỔNG QUAN SẢN PHẨM

❶ QUAN TRỌNG:


Để có được hiệu suất tốt nhất từ máy rửa chén, hãy đọc tất cả các hướng dẫn vận hành trước khi sử dụng nó lần đầu tiên.

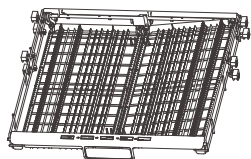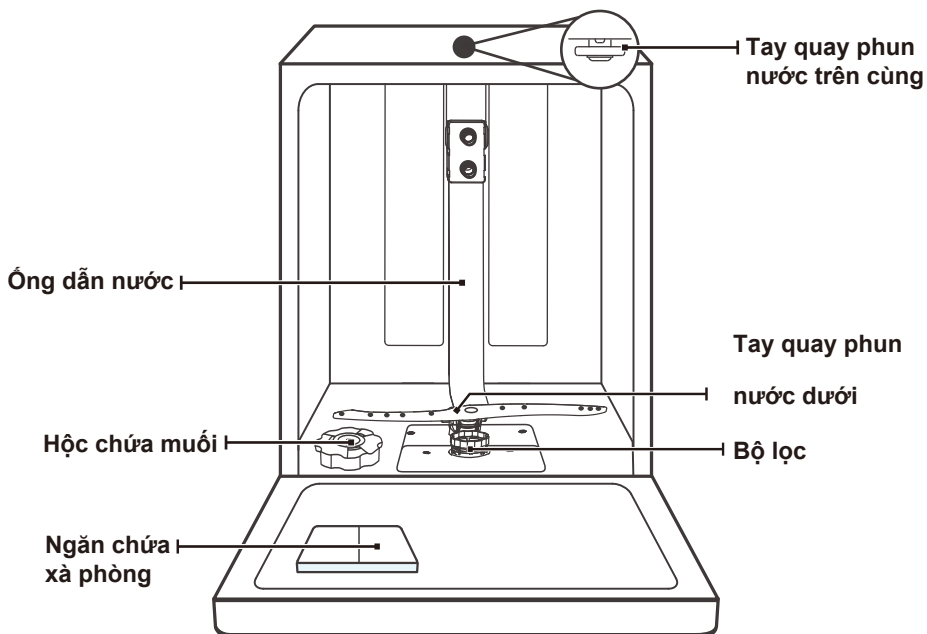

Rổ đựng muỗng nĩa

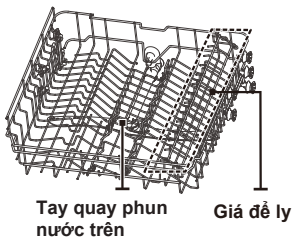

Rổ dưới (Bottom tray)

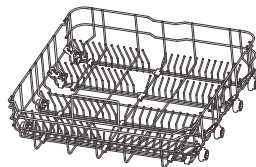

Rổ dưới




GHI CHÚ:

Hình ảnh chỉ mang tính chất tham khảo, các mô hình khác nhau có thể khác nhau.

SỬ DỤNG MÁY RỬA CHÉN

Trước khi sử dụng máy rửa chén:

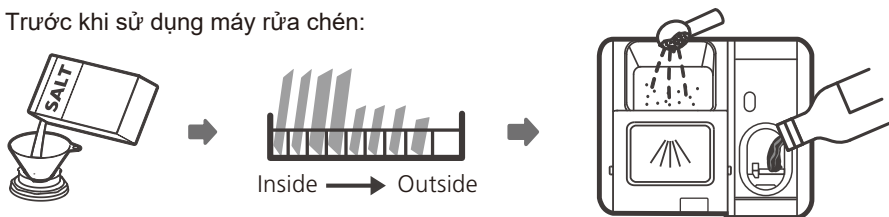

1. Thiết lập làm mềm nước
2. Thêm muối
3. Xếp chén đĩa vào rổ
4. Thêm xà phòng



Vui lòng xem đoạn 1 "Làm mềm nước" của phần II: Phiên bản đặc biệt, nếu bạn muốn cài đặt làm mềm nước.

Nạp muối vào chất làm mềm nước



GHI CHÚ:

Nếu máy rửa chén của bạn không sử dụng bất kỳ chất làm mềm nước nào, có thể bỏ qua phần này.

Luôn sử dụng muối dành cho việc sử dụng máy rửa chén.

Hộc chứa muối nằm bên dưới rổ bên dưới và nên được nạp đầy như những điều nêu sau đây:

⚠ CẢNH BÁO


- **Chỉ sử dụng muối đặc biệt thiết kế riêng cho máy rửa chén!**

Những loại muối khác không được thiết kế để sử dụng cho máy rửa chén như muối ăn sẽ làm hỏng chất làm mềm nước. Trong trường hợp thiệt hại do sử dụng muối không phù hợp, nhà sản xuất sẽ không chịu bất kỳ trách nhiệm gì về thiệt hại nào gây ra.

- **Chỉ nạp muối trước khi bắt đầu chu trình rửa!**

Điều này sẽ làm ngăn chặn muối hoặc nước muối đã nạp ở phần đáy của máy trong bất kỳ khoảng thời gian nào và nó có thể gây ăn mòn.

Vui lòng làm theo các bước sau đây để thêm muối rửa chén:

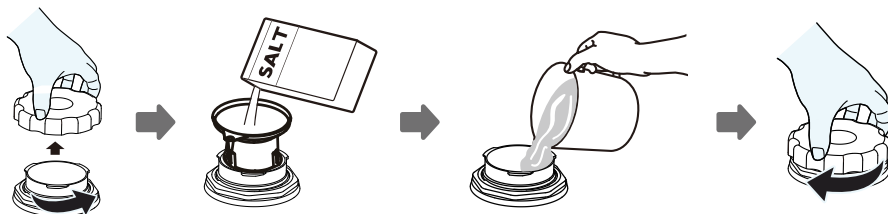

1. Tháo rổ dưới và mở nắp hộp chứa.
2. Đặt phễu (được cung cấp sẵn) vào lỗ và đổ khoảng 1.5kg muối vào hộp chứa muối.
3. Đổ đầy nước vào hộp chứa muối tới giới hạn tối đa, một ít nước tràn ra khỏi hộp chứa muối là bình thường.
4. Sau khi thêm muối, hãy vặn nắp thật chặt.
5. Đèn cảnh báo muối sẽ dừng sau khi đổ đầy hộp chứa muối.
6. Sau khi đổ muối vào hộp chứa muối, nên bắt đầu chương trình rửa (Chúng tôi khuyến nghị nên sử dụng chương trình ngắn). Nếu không hệ thống lọc, bơm hoặc các bộ phận khác có thể bị hư hỏng do nước mặn. Điều này không bao gồm trong bảo hành.

NOTE:

- Hộp chứa muối chỉ được nạp lại sau khi đèn cảnh báo muối sáng () trên bảng điều khiển. Tùy thuộc vào mức độ hòa tan của muối, đèn cảnh báo muối vẫn có thể được bật ngay cả khi hộp chứa muối được nạp đầy. Nếu không có đèn cảnh báo muối trong bảng điều khiển (đối với một số kiểu máy), bạn có thể ước tính khi nào cần đổ muối vào các chu kỳ mà máy rửa chén đã chạy.
- Nếu muối đã được nạp, hãy chạy chương trình xả hoặc rửa nhanh để không làm hỏng hệ thống lọc.


Mẹo sắp xếp chén đĩa

Điều chỉnh rổ trên


Kiểu 1:

Chiều cao của rổ trên có thể dễ dàng điều chỉnh để chứa các đĩa cao hơn ở rổ trên hoặc rổ dưới.


Để điều chỉnh chiều cao của rổ trên, hãy làm theo các bước sau:

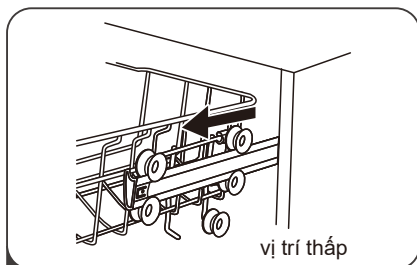


1 Kéo rổ phía trên ra.

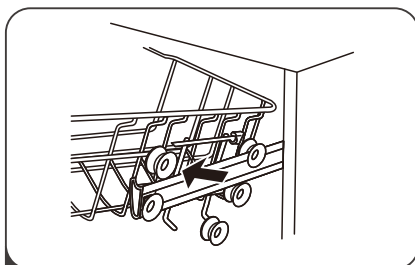

2 Tháo rổ phía trên.

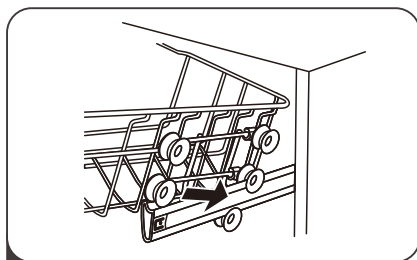


3 Lắp lại rổ trên vào con lăn trên hoặc dưới.

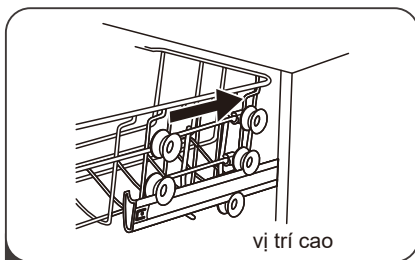


4 Đẩy rổ trên vào.

Kiểu 2:

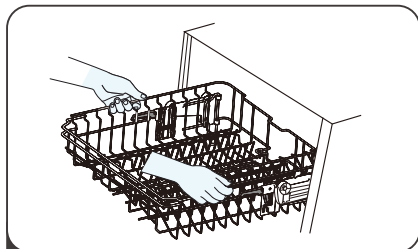

- 1** Để nâng rổ trên, chỉ cần nâng rổ trên ở giữa mỗi bên cho đến khi rổ khóa vào đúng vị trí ở trên. Không cần phải nâng tay cầm điều chỉnh.

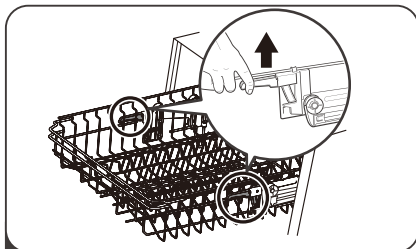

- 2** Để hạ rổ trên xuống, hãy nâng tay cầm điều chỉnh ở mỗi bên để thả rổ và hạ rổ xuống vị trí thấp hơn.

Gấp giá để ly

Để có chỗ cho những vật dụng cao hơn trong rổ trên, hãy nâng giá đựng cốc lên. Sau đó, bạn có thể dựa những chiếc ly cao vào đó.




Gấp các giá đỡ

Các gai của rổ dưới được dùng để đựng đĩa và khay đựng. Chúng có thể được hạ xuống để có thêm không gian cho các vật dụng lớn.

nâng lên cao

gấp ngược lại

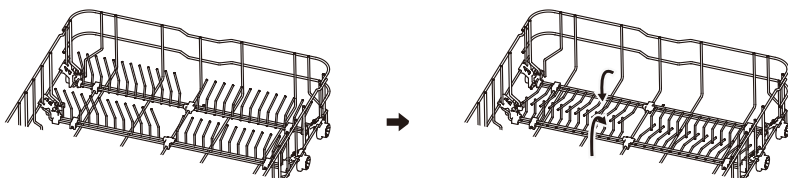

BẢO TRÌ VÀ VỆ SINH

Làm sạch bên ngoài

Cửa và gioăng cửa

Thường xuyên vệ sinh cửa bằng miếng vải mềm để loại bỏ cặn thực phẩm. Khi máy rửa chén đang hoạt động, dư lượng thực phẩm và đồ uống có thể đọng lại ở hai bên cửa. Các bề mặt này nằm bên ngoài khoang rửa, và nước không thể tiếp xúc được tới chúng. Bất kỳ dư lượng nào cũng phải được làm sạch trước khi đóng cửa lại.

Bảng điều khiển

Nếu cần thiết phải vệ sinh bảng điều khiển chỉ được lau bằng khăn mềm ẩm.

CẢNH BÁO

- Để tránh sự xâm nhập của nước vào bên trong khóa cửa và các bộ phận điện, không sử dụng các vật liệu làm sạch có hệ thống phun.
- Không sử dụng các sản phẩm tẩy rửa có tính ăn mòn trên bề mặt ngoài, vì chúng có thể làm trầy xước lớp sơn. Một số loại khăn giấy cũng có thể làm xước hoặc để lại dấu vết trên bề mặt.


Làm sạch bên trong

Hệ thống lọc


Hệ thống lọc giữ lại các mảnh vụn từ chương trình rửa. Các mảnh vụn này có thể làm tắc nghẽn bộ lọc. Kiểm tra bộ lọc thường xuyên và làm sạch chúng bằng nước. Vui lòng làm theo các bước dưới đây để làm sạch bộ lọc.

GHI CHÚ:


Hình ảnh chỉ mang tính chất tham khảo, các mô hình khác nhau cánh tay phun và hệ thống lọc có thể khác nhau.

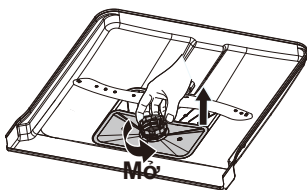


- 1** Giữ bộ lọc thô và xoay ngược chiều kim đồng hồ để mở khóa bộ lọc. Nhấc bộ lọc lên trên và tháo ra khỏi máy rửa chén.

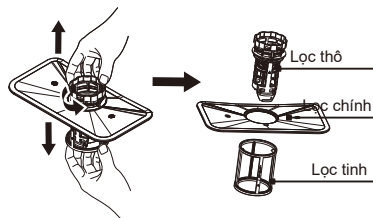

- 2** Bộ lọc tinh có thể được kéo ra khỏi đáy của bộ lọc chính bằng cách bóp nhẹ nhàng các mắt lưới ở phía trên và kéo nó ra.

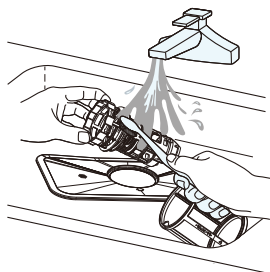

- 3** Dư lượng thực phẩm lớn có thể được làm sạch dưới vòi nước. Để làm sạch kỹ hơn hãy làm sạch bằng bàn chải mềm.

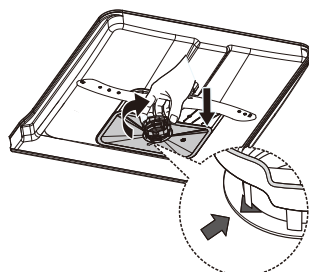

- 4** Lắp lại các bộ lọc ngược lại theo thứ tự tháo gỡ, thay thế bộ lọc, lắp và xoay theo chiều kim đồng hồ theo hướng mũi tên.


⚠ CẢNH BÁO

- Không được siết chặt bộ lọc, đặt bộ lọc lại thật cẩn thận, nếu không các mảnh vụn thức ăn sẽ xâm nhập vào hệ thống làm tắc nghẽn.
- Không được sử dụng máy rửa chén không gắn bộ lọc. Việc thay thế bộ lọc không đúng cách có thể làm giảm hiệu suất và hư hỏng thiết bị, đồ dùng.


Hệ thống tay phun

Làm sạch hệ thống tay phun là cần thiết vì hóa chất trong nước cứng có thể làm tắc nghẽn tay phun hoặc làm hỏng vòng bi.


Để làm sạch hệ thống tay phun, hãy làm theo hướng dẫn dưới đây:

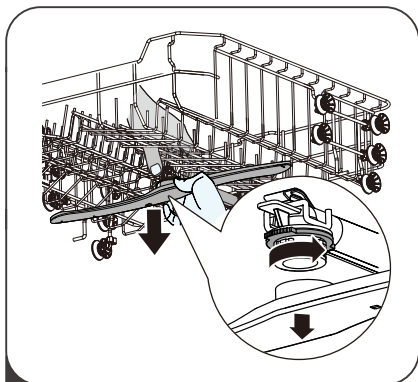

- 1 Để tháo tay phun phía trên, giữ đai ốc ở giữa và xoay ngược chiều kim đồng hồ để tháo nó ra.

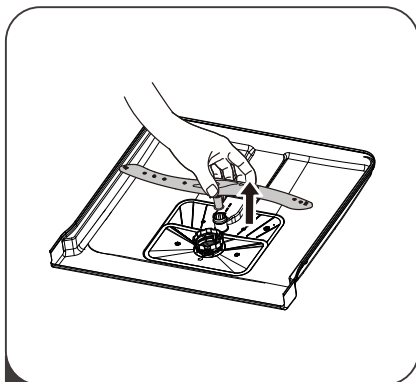

- 2 Để tháo tay phun phía dưới, kéo tay phun lên trên.

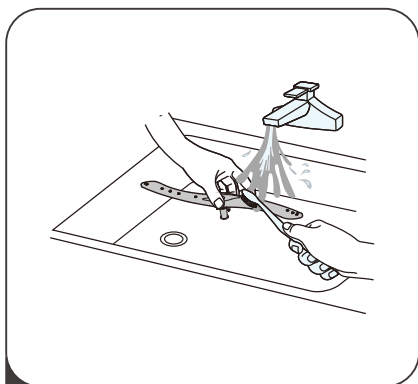

- 3 Rửa tay phun bằng nước ấm và sử dụng bàn chải mềm để làm sạch các tia. Lắp lại chúng sau khi làm sạch.

Bảo dưỡng máy rửa chén

Cảnh báo đóng băng

Vui lòng thực hiện các biện pháp bảo vệ sương trên máy rửa chén vào mùa đông. Sau mỗi chu trình rửa, hãy thực hiện như sau:

1. Ngắt nguồn điện của máy rửa chén.
2. Tắt nguồn cung cấp nước và ngắt ống dẫn nước ra khỏi van nước.
3. Xả nước từ ống dẫn nước và van nước. (Sử dụng khay hứng nước)
4. Nối lại ống dẫn nước vào van nước.
5. Tháo bộ lọc ở đáy bồn và sử dụng miếng bọt biển để thấm nước trong bể chứa.

Sau mỗi lần rửa

Sau mỗi lần rửa, hãy tắt nguồn cấp nước cho thiết bị và mở hé cửa để độ ẩm và mùi không bị kẹt bên trong.

Tháo phích cắm

Trước khi thực hiện vệ sinh và bảo trì, luôn tháo phích cắm khỏi ổ cắm.

Không sử dụng dung môi hoặc chất tẩy rửa mài mòn

Để làm sạch bên ngoài và miếng cao su của máy rửa chén, không sử dụng dung môi hoặc các sản phẩm làm sạch có tính mài mòn, chỉ sử dụng khăn với nước xà phòng ấm.

Để loại bỏ các vết bẩn ở bề mặt bên trong, hãy sử dụng khăn với một ít giấm hoặc chất tẩy rửa dùng riêng cho máy rửa chén.

Khi không sử dụng trong thời gian dài

Bạn nên chạy một chu trình trống sau đó tháo phích cắm ra khỏi ổ cắm, tắt nguồn cấp nước và mở hé cửa. Điều này sẽ giúp kéo dài tuổi thọ gioăng cửa và ngăn bốc mùi trong thiết bị.

Di chuyển thiết bị

Nếu thiết bị phải di chuyển, hãy cố gắng giữ thiết bị ở vị trí thẳng đứng.

Gioăng cửa

Một trong những yếu tố gây ra mùi hình thành trong máy rửa chén là thực phẩm vẫn còn bị mắc kẹt trong các gioăng cửa. Làm sạch thường xuyên bằng miếng bọt biển ẩm sẽ tránh tình trạng này xảy ra.

HƯỚNG DẪN LẮP ĐẶT

⚠ CẢNH BÁO



Cảnh báo điện giật

Ngắt kết nối nguồn điện trước khi lắp đặt máy rửa chén.

Không tuân thủ có thể dẫn đến tử vong hoặc điện giật.

⚠ Chú ý

Việc lắp đặt đường ống và thiết bị điện phải được thực hiện bởi nhân viên kỹ thuật.

• Kết nối nguồn điện

⚠ CẢNH BÁO

Vì sự an toàn cá nhân:

- Không sử dụng dây nối hoặc bộ chuyển đổi phích cắm với thiết bị này.
- Không được tháo hoặc ngắt kết nối dây nối đất trong bất kỳ trường hợp nào.

Yêu cầu về điện

Vui lòng xem bảng đánh giá để biết cấp điện áp và kết nối máy rửa chén với nguồn điện phù hợp. Sử dụng cầu chì tiêu chuẩn 10A / 13A / 16A, bộ tạm hoãn thời gian hoặc bộ ngắt mạch được khuyến nghị và cung cấp mạch riêng biệt chỉ sử dụng cho thiết bị này.

Kết nối nguồn điện

Đảm bảo điện áp và tần số của nguồn điện tương ứng với điện áp trên tem thông số. Chỉ cắm phích cắm vào ổ cắm điện được nối đất đúng cách. Nếu ổ cắm điện không thích hợp với phích cắm, thay thế ổ cắm điện mới, thay vì sử dụng bộ chuyển đổi hoặc các thiết bị tương tự vì chúng có thể quá nóng và gây phỏng.


⚠ Đảm bảo rằng thiết bị được nối đất trước khi sử dụng.

Cấp và thoát nước

Kết nối ống cấp nước Nối

ống cấp nước lạnh vào đầu nối 1/2(inch) và chắc chắn rằng nó được gắn đúng vị trí.

Nếu các đường ống nước mới hoặc không được sử dụng trong một thời gian dài, hãy để nước chảy để đảm bảo nước trong. Đề phòng nguy cơ đầu vào của nước bị nghẹt và làm hỏng thiết bị.

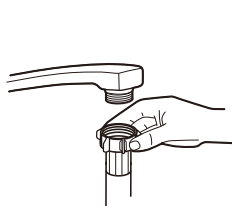

ống cấp nước thông thường



ống cấp nước an toàn

Về ống cấp nước an toàn

Ống cấp an toàn bao gồm các bức tường đôi. Hệ thống của ống đảm bảo sự can thiệp của nó bằng cách ngăn chặn dòng chảy của nước trong trường hợp bị đứt ống cấp nước và khi không gian trống giữa ống cấp nước và ống ngoài có đầy nước.

⚠ CẢNH BÁO

Ống nối với vòi có thể bị vỡ nếu lắp trên cùng đường nước với máy rửa chén. Nếu bồn rửa của bạn có ống nối, bạn nên ngắt kết nối ống và bịt lỗ lại.

Kết nối ống cấp nước an toàn

1. Kéo ống cấp nước an toàn ra khỏi khoang phía sau máy rửa chén.
2. Xiết chặt các dây cấp nước vào vòi đầu nối 3/4inch.
3. Mở nước đầy trước khi khởi động máy rửa chén.


Mở nước đầy trước khi khởi động máy rửa chén.

1. Tắt nước.
2. Tháo ống cấp nước an toàn ra khỏi vòi.

Kết nối ống thoát nước

Lắp ống thoát nước vào ống xả có đường kính tối thiểu là 40mm hoặc để ống xả chảy vào bồn rửa, đảm bảo ống xả không bị gấp khúc. Chiều cao của ống xả phải nhỏ hơn 1000mm. Đầu ống xả tự do không được ngâm trong nước để tránh tình trạng tràn ngược vào ống xả.

⚠ Vui lòng cố định vị trí ống xả ở vị trí A hoặc vị trí B

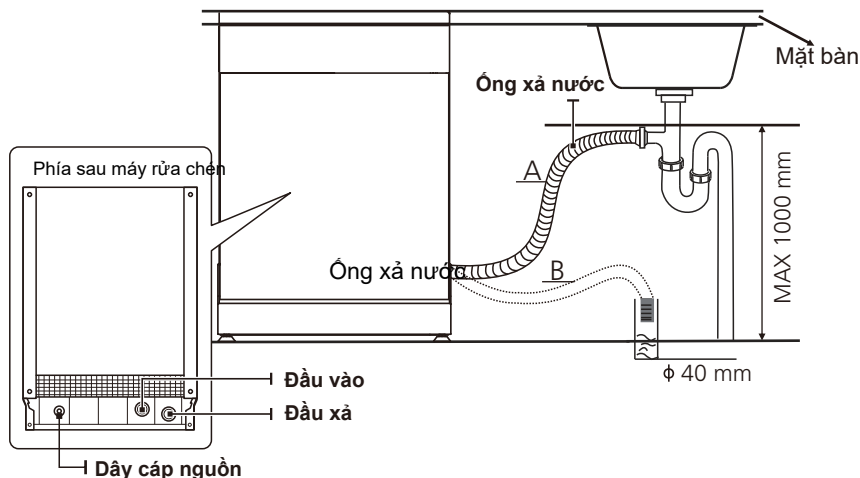

Xả nước thừa từ ống

Nếu bồn rửa cao hơn 1000mm so với mặt sàn, thì lượng nước dư thừa trong ống không thể thoát trực tiếp vào bồn rửa. Khi đó, nó sẽ cần phải được thoát nước vào một vật chứa bên ngoài thấp hơn so với bồn rửa.

Ống thoát nước

Kết nối ống thoát nước. Ống thoát nước phải được lắp đúng cách để tránh rò rỉ nước, đảm bảo ống thoát nước không bị xoắn hoặc bị đè lên.

Ống mở rộng

Nếu bạn cần lắp ống mở rộng, đảm bảo rằng bạn sử dụng một ống tương tự. Ống mở rộng không được dài quá 4m, nếu không nó sẽ ảnh hưởng đến hiệu quả làm sạch của máy rửa chén.

Kết nối ống xi phong


Kết nối ống xi phong phải ở độ cao dưới 100 cm (tối đa) từ đáy máy rửa chén. Ống thoát nước nên được giữ cố định.

Lắp đặt thiết bị

Đặt thiết bị ở vị trí mong muốn, mặt sau phải tựa vào bức tường phía sau nó và hai bên dọc theo các tủ hoặc tường liền kề. Máy rửa chén được trang bị ống cấp nước và ống thoát nước có thể được đặt bên phải hoặc bên trái để thuận tiện cho việc lắp đặt đúng cách.

Điều chỉnh thiết bị

Khi thiết bị được định vị để cân bằng, chiều cao của máy rửa chén có thể được thay đổi thông qua việc điều chỉnh chân xoay. Trong mọi trường hợp thiết bị không được nghiêng quá 2°.

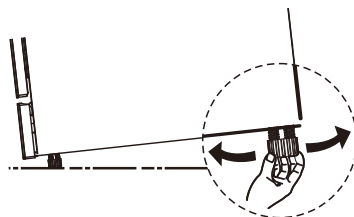


Lắp đặt âm tủ (đối với mô hình âm tủ)

Bước 1. Lựa chọn vị trí thích hợp để lắp đặt máy rửa chén


Vị trí lắp đặt máy rửa chén phải thuận tiện để lắp ống dẫn nước vào và ống xả hiện có và ổ cắm điện.

Minh họa kích thước tủ và vị trí lắp đặt máy rửa chén.

1. Khoảng cách giữa mặt trên của máy rửa chén và tủ và cửa ngoài thẳng hàng với tủ ít hơn 5 mm.

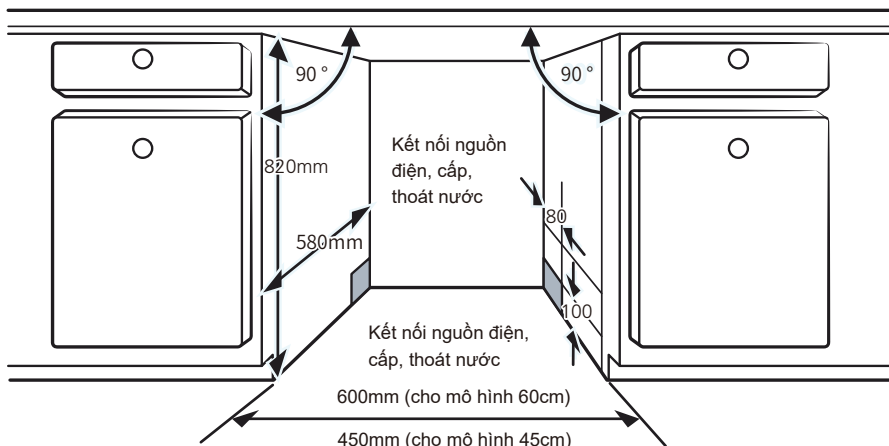

2. Nếu máy rửa chén được lắp ở góc tủ, cần phải có một khoảng trống khi mở cửa.

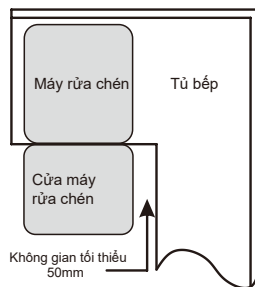

LƯU Ý:



Tùy thuộc vào vị trí ổ cắm điện, bạn có thể cần phải chuẩn bị sẵn một lỗ ở phía tủ đối diện.

Bước 2. Kích thước và lắp đặt mặt ốp gỗ



Thực hiện theo hướng dẫn lắp đặt cụ thể để gắn mặt ốp gỗ.

Lắp móc vào mặt ốp gỗ (xem hình 4A) và đặt móc vào khe cửa ngoài của máy rửa chén (xem hình 4B). Sau khi cố định mặt ốp, nhấn vào đầu mặt ốp gỗ để đảm bảo móc nhựa được cố định.

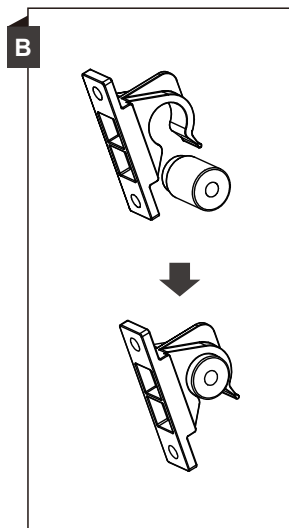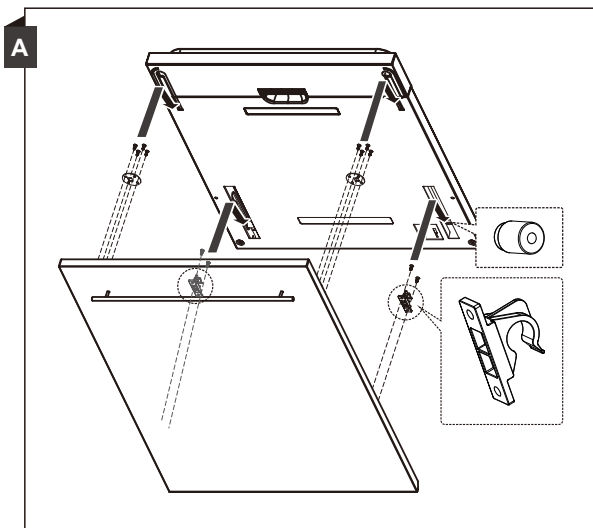


Bước 3. Các bước lắp đặt máy rửa chén



Vui lòng tham khảo các bước lắp đặt cụ thể trong bản vẽ lắp đặt.


1. Dán dải ngưng tụ dưới bề mặt làm việc của tủ. Hãy đảm bảo dải ngưng tụ ngang bằng với mép mặt bếp. (Bước 2)
2. Kết nối ống cấp nước.
3. Kết nối ống thoát nước.
4. Kết nối nguồn điện.
5. Đặt máy rửa chén vào khoang tủ.
6. Cân bằng máy rửa chén. Có thể điều chỉnh chân sau từ phía trước máy rửa chén bằng cách vặn vít ở giữa để máy rửa chén.
Để điều chỉnh chân trước, hãy sử dụng tua vít dẹt và vặn chân trước cho đến khi máy rửa chén cân bằng. (Bước 5 đến Bước 6)
7. Lắp mặt ốp vào cửa ngoài của máy rửa chén. (Bước 7 đến Bước 9)
8. Máy rửa chén phải được cố định tại chỗ. Có hai cách để thực hiện việc này:
 - A. Bề mặt làm việc thông thường: Đặt móc lắp vào khe của mặt phẳng bên và cố định nó vào bề mặt làm việc bằng vít.
 - B. Mặt bàn bằng đá cẩm thạch hoặc đá granit: Cố định mặt bàn bằng vít.

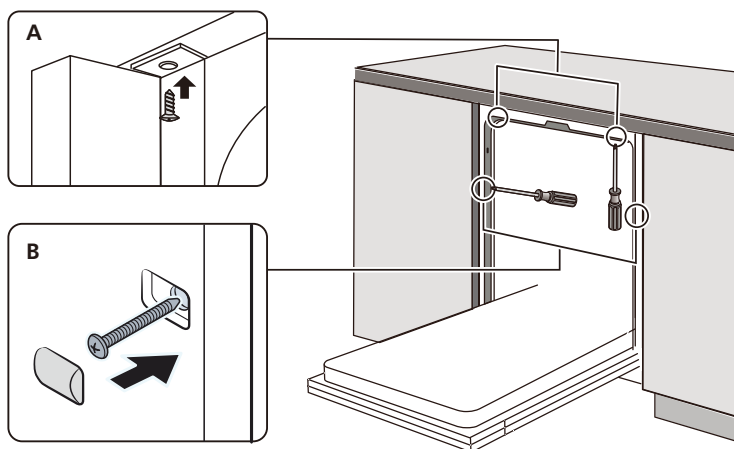

Bước 4. Cân bằng máy rửa chén

Máy rửa chén phải cân bằng để đảm bảo máy rửa chén hoạt động tốt.

1. Đặt thước thủy vào cửa và đường ray bên trong bồn như hình minh họa để kiểm tra xem máy rửa chén đã cân bằng chưa.
2. Cân bằng máy rửa chén bằng cách điều chỉnh ba chân cân bằng riêng lẻ.
3. Khi cân bằng máy rửa chén, hãy chú ý không để máy bị lật.

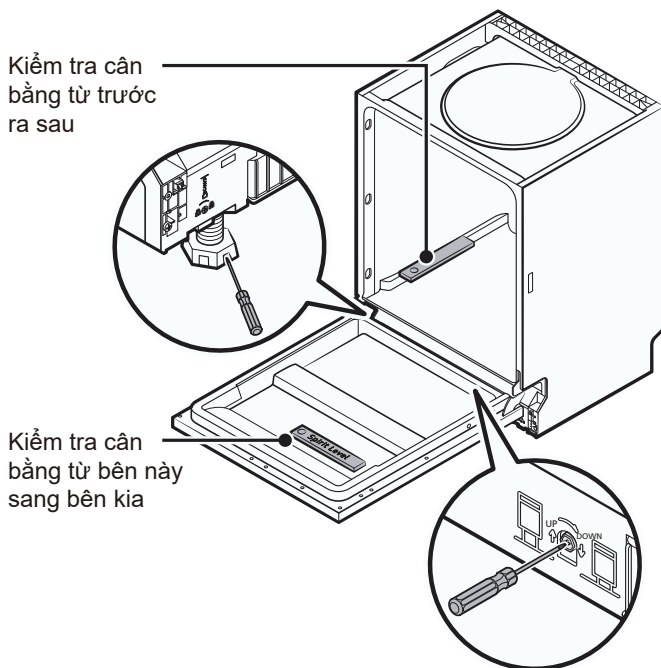

💡 LƯU Ý:

Chiều cao điều chỉnh tối đa của chân là 50 mm.

MẸO XỬ LÝ SỰ CỐ

Trước khi gọi trung tâm chăm sóc khách hàng

Xem lại các hướng dẫn có thể giúp bạn không cần gọi dịch vụ.

Vấn đề	Nguyên nhân	Khắc phục
Máy rửa chén không hoạt động	Đứt cầu chì hoặc ngắn mạch.	Thay thế cầu chì hoặc thiết bị ngắn mạch. Tháo bất kỳ thiết bị nào dùng chung với máy rửa chén.
	Không có nguồn điện	Đảm bảo máy rửa chén được bật và cửa đóng chặt. Đảm bảo dây nguồn được cắm đúng cách vào ổ điện.
	Áp suất nước thấp	Kiểm tra nguồn cấp nước có được kết nối đúng cách và nước được bật hay không.
	Không đóng cửa đúng cách	Hãy chắc chắn đóng cửa đúng cách và chốt cửa.
Nước không bơm được từ máy rửa chén	Ống thoát nước bị xoắn hoặc nghẹt	Kiểm tra ống thoát nước.
	Bộ lọc bị nghẹt	Kiểm tra bộ lọc thô.
	Chậu rửa bị nghẹt	Kiểm tra chậu rửa để chắc chắn rằng nó thoát nước tốt. Nếu vẫn đề là chậu rửa chén không thoát nước, bạn cần một thợ sửa ống nước để kiểm tra cho bạn.
Cặn trong bồn rửa	Xà phòng không thích hợp	Chỉ sử dụng chất tẩy rửa đặc biệt để tránh bọt. Nếu điều này xảy ra, hãy mở máy rửa chén để bọt bay hơi. Thêm khoảng 3.5L nước vào đáy máy rửa chén. Đóng cửa và chọn bất kỳ chu trình nào. Sau đó, nước sẽ xả khỏi máy rửa chén. Mở cửa và kiểm tra xem đã hết bọt chưa. Lặp lại nếu cần thiết.

Vấn đề	Nguyên nhân	Khắc phục
	Bị tràn	Luôn làm sạch ngay lập tức.
Khoang bên trong sẫm màu	Có thể đã sử dụng chất tẩy rửa có màu	Đảm bảo rằng xà phòng không có màu.
Màng trắng ở bề mặt bên trong	Khoáng chất trong nước cứng	Để vệ sinh bên trong, hãy sử dụng miếng bọt biển ẩm với xà phòng rửa chén và đeo găng tay cao su. Không được sử dụng các chất tẩy rửa khác vì chúng có thể tạo bọt.
Các vết gỉ	Các vật bị ảnh hưởng ăn mòn	Tránh rửa các đồ vật bị ăn mòn trong máy rửa chén.
	Không một chu trình nào hoạt động sau khi nạp muối. Muối đã đi vào chu trình rửa	Luôn chạy một chu trình không có đồ sành sứ sau khi thêm muối. Không chọn chức năng Turbo (nếu có)
	Nắp hộp chứa muối bị lỏng	Kiểm tra nắp hộp muối.
Tiếng ồn trong máy rửa chén	Cánh tay phun đang chạm vào một vật gì đó	Dừng chương trình và sắp xếp lại đồ vật cản trở cánh tay phun.
Tiếng ồn trong máy rửa chén	Những đồ sành sứ để trong máy rửa chén	Dừng chương trình và sắp xếp lại các đồ sành sứ.
Tiếng ồn trong ống nước	Điều này do cài đặt hoặc mặt cắt ngang đường ống.	Điều này không ảnh hưởng đến chức năng rửa chén, hãy liên hệ với thợ sửa ống nước.
Chén đĩa không sạch	Xếp chén đĩa không đúng cách	Xem phần II "Chuẩn bị và sắp xếp chén đĩa".
	Chương trình rửa không đủ mạnh	Chọn chương trình rửa mạnh hơn.

Vấn đề	Nguyên nhân	Khắc phục
Chén đĩa không sạch	Không đủ xà phòng	Thêm xà phòng hoặc đổi xà phòng khác
	Các vật đang chặn cánh tay phun	Sắp xếp lại đồ vật để không cản trở cánh tay phun.
	Bộ lọc kết hợp không sạch hoặc không được lắp đúng vào đáy lồng rửa. Điều này có thể gây ra việc cánh tay phun bị chặn.	Làm sạch bộ lọc đúng cách. Làm sạch cánh tay phun
Đồ thủy tinh bị mờ	Sự kết hợp của nước mềm và quá nhiều xà phòng	Sử dụng ít xà phòng hơn nếu bạn có nước mềm và chọn một chu kỳ ngắn hơn để rửa vật dụng thủy tinh.
Những đốm trắng trên đĩa và ly	Vùng nước cứng có thể gây ra các đốm trắng	Kiểm tra cài đặt làm mềm nước hoặc trạng thái đầy của ngăn đựng muối.
Những đốm trắng trên đĩa và ly	Vùng nước cứng có thể gây ra các đốm trắng	Thêm muối.
Xà phòng còn sót lại trong ngăn	Bát đĩa chặn ngăn đựng xà phòng	Xếp lại chén đĩa đúng cách.
Chén đĩa không khô	Xếp chén đĩa không đúng cách.	Xếp lại chén đĩa đúng cách.
	Chén đĩa được lấy ra quá sớm	Không đổ hết nước trong máy rửa chén ngay sau khi rửa. Mở nhẹ cửa để hơi nước có thể thoát ra. Lấy bát đĩa ra cho đến khi nhiệt độ bên trong an toàn để chạm vào. Trước tiên, hãy lấy hết đồ trong giỏ dưới ra để tránh nước nhỏ xuống từ giỏ trên.


Vấn đề	Nguyên nhân	Khắc phục
Chén đĩa sấy không khô	Lựa chọn không đúng chương trình rửa	Với một chương trình rửa ngắn, nhiệt độ rửa thấp hơn, làm giảm hiệu suất. Chọn chương trình có thời gian rửa lâu hơn.
	Sử dụng dao kéo với chất lượng bao phủ kém	Việc thoát nước khó khăn hơn so với các vật dụng này. Dao kéo hoặc các vật dụng tương tự không nên rửa bằng máy rửa chén.

CẢNH BÁO

Việc tự sửa chữa hoặc sửa chữa không chuyên nghiệp có thể gây ra rủi ro nghiêm trọng cho sự an toàn của người sử dụng thiết bị và ảnh hưởng đến chế độ bảo hành.


SẮP XẾP RỎ THEO EN50242:

1.Rỏ trên:

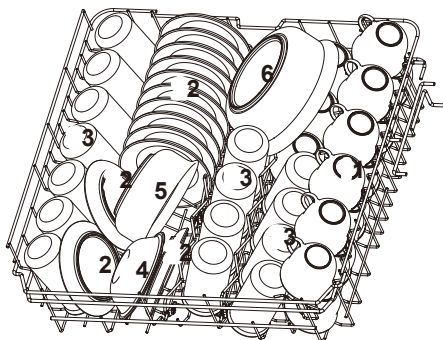



STT	Loại
1	Tách
2	Dĩa tách
3	Ly
4	Chén nhỏ
5	Chén vừa
6	Chén lớn

2.Rỏ dưới:

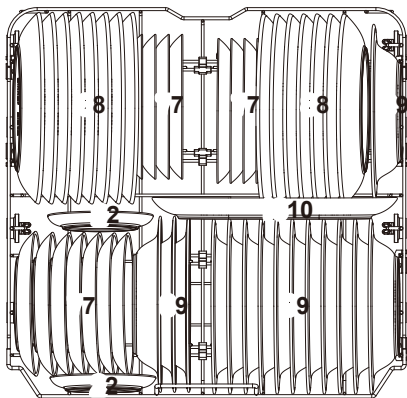

STT	Loại
7	Dĩa tráng miệng
8	Đĩa món chính
9	Đĩa súp
10	Đĩa dài


3.Kệ muỗng nĩa:

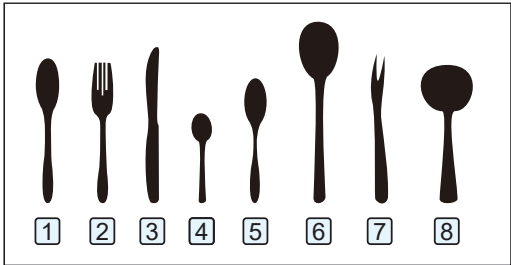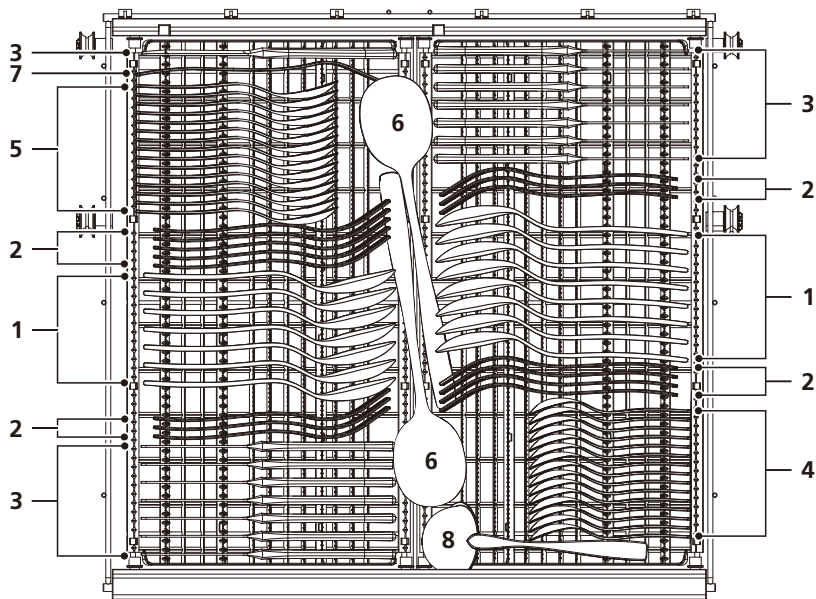


Thông tin so sánh kiểm tra theo EN 50242
Dung tích: 15 bộ chén đĩa
Vị trí giỏ trên: thấp hơn
Chương trình: ECO
Rinse aid setting: **Max**
Softener setting: H3
Thiết lập nước làm bóng: tối đa
Thiết lập muối: H3

STT	Loại
1	Muỗng súp
2	Nĩa
3	Dao
4	Muỗng cà phê
5	Muỗng ăn tráng miệng
6	Muỗng salad
7	Nĩa salad
8	Vá


Mẹo sử dụng khay để dao kéo

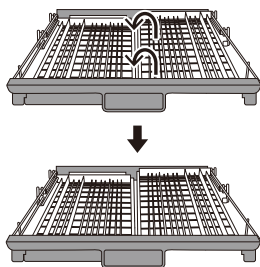


Nâng khay bên phải lên, cả khay bên trái và bên phải đều phẳng.

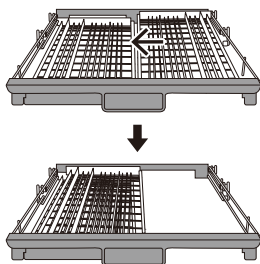

Di chuyển khay bên phải từ phải sang trái, hai khay chồng lên nhau.

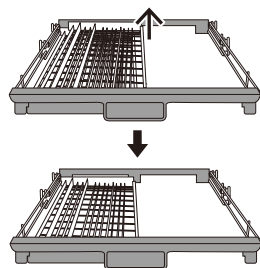

Lấy khay bên phải ra khỏi khay, chỉ còn khay bên trái.

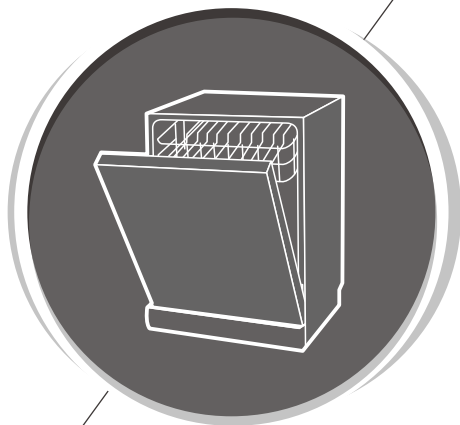

MÁY RỬA CHÉN

HƯỚNG DẪN SỬ DỤNG

Phần II: Phiên bản đặc biệt

MDW14-7713AD



Vui lòng đọc kỹ hướng dẫn trước khi
sử dụng máy rửa chén và giữ lại để
tham khảo về sau

CONTENTS


01	04	SỬ DỤNG MÁY RỬA CHÉN
	04	Bảng điều khiển
	07	Làm mềm nước
	08	Chuẩn bị và xếp chén đĩa
	11	Chức năng của xà phòng và nước làm bóng Thêm nước làm bóng
	12	Thêm xà phòng
02	13	LỰA CHỌN CHƯƠNG TRÌNH Bảng
	14	chương trình rửa
	14	Tiết kiệm năng lượng
	16	Bắt đầu một chương trình
	16	Thay đổi chế độ giữa chương trình
	17	Quên chén đĩa?
03	17	Tự động mở cửa
	18	CÁC MÃ LỖI
04	18	THÔNG SỐ KỸ THUẬT

GHI CHÚ:

- Nếu bạn không thể tự giải quyết được vấn đề, hãy liên hệ với dịch vụ kỹ thuật.
- Nhà sản xuất tuân theo chính sách phát triển liên tục và cập nhật sản phẩm mà không cần báo trước.
- Nếu bị mất hoặc lỗi thời, bạn có thể nhận được hướng dẫn sử dụng mới từ nhà sản xuất hoặc nhà cung cấp được ủy quyền.

HƯỚNG DẪN NHANH


Vui lòng đọc nội dung tương ứng trên bảng hướng dẫn để biết cách vận hành thiết bị chi tiết.

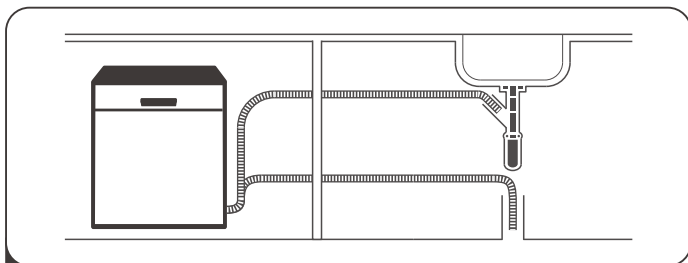


- 1** Lắp đặt thiết bị
(Vui lòng xem đoạn 5 “HƯỚNG DẪN LẮP ĐẶT” của phần I:
Phiên bản chung)



- 2** Loại bỏ thức ăn và các vật dụng
trên chén đĩa.

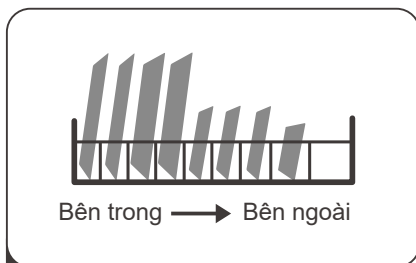

- 3** Xếp chén đĩa

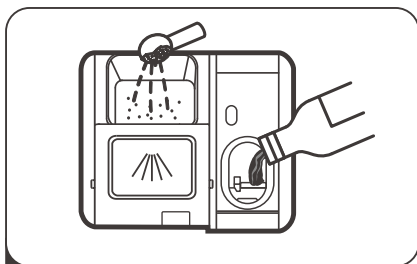


- 4** Thêm muối và nước làm bóng



- 5** Lựa chọn chương trình
và vận hành thiết bị.

SỬ DỤNG THIẾT BỊ

Bảng điều khiển

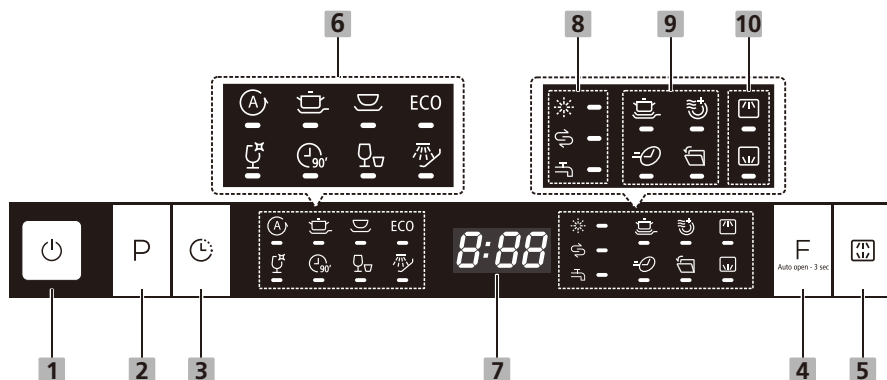

Vận hành

1 Nguồn	Chạm phím này để mở máy rửa chén.
2 Chương trình	Chạm phím này để chọn chương trình rửa phù hợp, đèn báo chương trình sẽ sáng.
3 Trì hoãn	Chạm phím Trì hoãn để đặt thời gian bắt đầu rửa. Trì hoãn một chu kỳ lên đến 24 giờ theo từng khoảng một giờ. Sau khi cài đặt thời gian trễ, hãy đóng cửa để bắt đầu.
4 Chức năng	Chạm phím để chọn chức năng, đèn báo tương ứng sẽ sáng.
5 Tùy chọn	Chạm phím để chọn rửa kệ trên hoặc kệ dưới và đèn báo sẽ sáng.

Màn hình

6 Chương trình	 Rửa tự động Tự động điều chỉnh thời gian rửa tùy theo độ bẩn của chén đĩa.
----------------	---

Màn hình

6 Chương trình	 Rửa kỹ Đối với đồ sành sứ nặng, cũng như nồi chảo, chén đĩa bẩn thông thường, v.v... với thực phẩm khô.  Phổ biến Dành cho các loại dụng cụ bẩn thông thường như nồi, chảo đĩa, ly và chảo bẩn nhẹ. ECO Tiết kiệm Đây là chương trình tiêu chuẩn phù hợp với các loại chén đĩa thông thường, chẳng hạn như nồi, đĩa, ly và chảo ít bẩn.  Rửa ly Đối với đồ sành sứ nhẹ và thủy tinh.  90 phút Dành cho chén đĩa bẩn ít cần rửa nhanh.  Rửa nhanh Dành cho chén đĩa thông thường cần rửa nhanh.  Ngâm Để rửa sạch bát đĩa mà bạn dự định rửa sau hoặc chén đĩa bẩn nhiều.
7 Màn hình	 Để hiển thị thời gian chương trình còn lại và thời gian trễ, mã lỗi, v.v.
8 Chỉ thị cảnh báo	 Nước làm bóng Nếu chỉ báo "  " sáng, có nghĩa là máy rửa chén còn ít nước làm bóng, cần nạp thêm.  Muối Nếu chỉ báo "  " sáng, có nghĩa là máy rửa chén còn ít muối, cần nạp thêm.  Vòi nước Nếu đèn báo "  " sáng, nghĩa là vòi nước đã đóng.

Display

9 Chỉ báo chức năng	Rửa tăng cường Rửa sạch các loại bát đĩa rất bẩn, khó rửa. (Chỉ áp dụng với chương trình rửa kỹ, phổ biến, tiết kiệm, rửa ly, 90 phút.) Sấy thêm Hiệu quả sấy tốt hơn. (Chỉ áp dụng với chương trình rửa kỹ, phổ biến, tiết kiệm, rửa ly, 90 phút.) Rửa nhanh Giảm thời gian chương trình. (Chỉ có thể sử dụng với chương trình rửa kỹ, phổ biến, tiết kiệm, rửa ly, 90 phút.) Tự động mở cửa Sau khi rửa, cửa sẽ tự động mở ra để đạt hiệu quả sấy khô tốt hơn. (Chỉ sử dụng được với chương trình Tự động, rửa kỹ, phổ biến, tiết kiệm, rửa ly, 90 phút.)
10 Chỉ báo thay thế	Trên Khi bạn chọn Trên, chỉ có bát đĩa ở kệ trên mới được rửa. Hệ thống phun của kệ dưới sẽ không hoạt động. Dưới Khi bạn chọn Dưới, chỉ có bát đĩa ở kệ dưới được rửa. Hệ thống phun của kệ trên sẽ không hoạt động.

Làm mềm nước

Bộ làm mềm nước cần phải cài đặt thủ công, sử dụng thiết bị đo độ cứng của nước.

Bộ làm mềm nước được thiết kế để loại bỏ các khoáng chất và muối từ nước gây bất lợi cho quá trình hoạt động của máy rửa chén.

Càng có nhiều khoáng chất thì nước càng cứng.

Chất làm mềm cần được điều chỉnh theo độ cứng của nước trong khu vực của bạn.

Điều chỉnh lượng muối tiêu thụ

Máy rửa chén được thiết kế để cho phép điều chỉnh lượng muối tiêu thụ dựa trên độ cứng của nước được sử dụng. Điều này nhằm mục đích tối ưu hóa và tùy chỉnh mức độ tiêu thụ muối.

Vui lòng làm theo các bước dưới đây để điều chỉnh lượng tiêu thụ muối.

1. Bật thiết bị;
2. Chạm phím Chương trình trong hơn 5 giây để khởi động chế độ làm mềm nước trong 60 giây sau khi thiết bị được mở;
3. Chạm phím Chương trình để chọn chương trình phù hợp với môi trường, các thiết lập sẽ thay đổi theo trình tự sau:
H1->H2->H3->H4->H5->H6;
4. Máy tự xác nhận trong 5 giây hoặc chạm phím Nguồn để hoàn tất thiết lập và thoát khỏi chế độ thiết lập.

ĐỘ CỨNG CỦA NƯỚC				Độ cứng của nước	Lượng muối tiêu thụ (g/chu trình)
German °dH	French °fH	British °Clarke	Mmol/l		
0 - 5	0 - 9	0 - 6	0 - 0.94	H1	0
6 - 11	10 - 20	7 - 14	1.0 - 2.0	H2	9
12 - 17	21 - 30	15 - 21	2.1 - 3.0	H3	12
18 - 22	31 - 40	22 - 28	3.1 - 4.0	H4	20
23 - 34	41 - 60	29 - 42	4.1 - 6.0	H5	30
35 - 55	61 - 98	43 - 69	6.1 - 9.8	H6	60

$1^{\circ}\text{dH}=1.25^{\circ}\text{Clarke}=1.78^{\circ}\text{fH}=0.178\text{mmol/l}$

Thiết lập: H3



Vui lòng kiểm tra đoạn 3 "Thêm muối làm mềm nước" của phần I: Phiên bản chung. Nếu máy rửa chén của bạn thiếu muối.



GHI CHÚ:

Nếu máy rửa chén của bạn không sử dụng bất kỳ chất làm mềm nước nào, có thể bỏ qua phần này.

Làm mềm nước

Độ cứng của nước sẽ thay đổi từ nơi này sang nơi khác. Nếu nước cứng được sử dụng trong máy rửa chén sẽ dẫn đến ăn mòn chén đĩa và dụng cụ.

Thiết bị được trang bị một chất làm mềm riêng biệt, sử dụng học đựng muối để loại bỏ vôi và khoáng chất khỏi nước.

Chuẩn bị và sắp xếp chén đĩa

- Xem xét việc mua các dụng cụ không phù hợp dùng với máy rửa chén.
- Đối với những dụng cụ cụ thể, chọn chương trình có nhiệt độ thấp nhất có thể.
- Để tránh thiệt hại, không lấy dao kéo, vật dụng thủy tinh ra khỏi máy rửa chén ngay sau khi kết thúc chương trình.

Đề rửa dao kéo/chén đĩa sau đây

Không phù hợp

- Dao kéo có tay cầm bằng gỗ, sừng hoặc xà cừ.
- Các vật dụng bằng nhựa không chịu nhiệt
- Dao kéo cũ với các bộ phận được dán keo không chịu nhiệt
- Các vật dụng dao kéo với mũi dao sắc nhọn
- Vật dụng chất liệu phi kim và đồng thau
- Thủy tinh thể
- Vật dụng kim loại bị gỉ sét
- Vật dụng gỗ
- Vật dụng làm từ sợi tổng hợp

Giới hạn phù hợp

- Một số loại kính có thể bị xỉn màu khi rửa nhiều
- Các vật dụng bằng nhôm và bạc có nguy cơ đổi màu sau khi rửa
- Các vật dụng tráng men có thể bị phai màu nếu rửa thường xuyên

Khuyến nghị khi sắp xếp máy rửa chén

Loại bỏ tất cả lượng lớn thức ăn thừa còn sót lại trước khi sắp xếp chén đĩa vào máy rửa chén. Làm mềm thức ăn bị cháy trong chảo

Không cần thiết phải tráng chén đĩa dưới vòi nước sạch.

(Các tính năng và cấu tạo của các rổ đựng chén đĩa có thể khác với mô hình mà bạn sở hữu)

Đặt các vật dụng vào máy theo hướng dẫn sau:

- Các vật dụng như cốc, ly, nồi chảo, v.v... đặt úp xuống dưới.
- Các vật dụng cong hoặc những vật dụng có hốc, nên để đặt nghiêng để nước có thể chảy ra ngoài
- Tất cả vật dụng xếp chồng lên nhau phải trong mức độ an toàn.
- Tất cả vật dụng được sắp xếp để cánh tay phun có thể hoạt động tự do trong quá trình rửa.
- Các vật chứa và dao kéo không được đặt đè lên nhau.
- Để tránh thiệt hại, vật dụng thủy tinh không được chạm vào nhau.
- Rổ trên được thiết kế để đặt những vật dụng nhỏ như ly, tách trà, cà phê, v.v...
- Những con dao không được đặt thẳng đứng vì sẽ là một mối nguy hại tiềm tàng!
- Những vật dụng như dao, kéo phải được đặt nằm ngang ở rổ trên.
- Vui lòng không tải chén đĩa quá mức tải của thiết bị. Điều này rất quan trọng liên quan đến hiệu quả và độ tiêu hao năng lượng.



GHI CHÚ:

Những vật dụng nhỏ không nên đặt trong rổ máy rửa chén vì có thể bị rơi ra ngoài.

Lấy chén đĩa ra ngoài

Để ngăn nước nhỏ từ trên xuống dưới, chúng tôi khuyến bạn nên lấy vật dụng từ rổ dưới trước, sau đó mới lấy vật dụng từ rổ trên.

⚠ CẢNH BÁO



Các vật dụng sẽ nóng! Để tránh thiệt hại, không lấy dao kéo và vật dụng thủy tinh ra khỏi máy trong vòng 15 phút sau khi chương trình kết thúc.


Sắp xếp chén đĩa ở rổ trên

Rổ trên được thiết kế để chứa những vật dụng nhỏ như ly, tách, cũng như chén đĩa nhỏ và đĩa nông (miễn là chúng không quá bẩn). Cố định các đĩa và các vật dụng để chúng không bị di chuyển khi phun nước.



Sắp xếp chén đĩa ở rổ dưới

Chúng tôi khuyên bạn nên đặt những vật dụng lớn cũng như những vật dụng khó làm sạch ở rổ bên dưới: chẳng hạn như nồi, chảo, nắp. Tốt nhất là đặt chén đĩa bên cạnh giá đỡ và tránh tay phun trên cùng. Đường kính tối đa được khuyến dùng cho các tấm phía trước hộp xả phòng là 19cm, điều này không cản trở việc mở cửa nó.

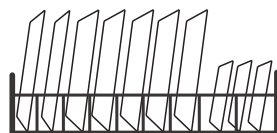

Sắp xếp rổ đựng dao muỗng nĩa

Dao muỗng nĩa nên được đặt trong rổ tách biệt với nhau ở các vị trí thích hợp và đảm bảo các dụng cụ không được lồng vào nhau, điều này có thể không đảm bảo hiệu suất rửa.

⚠ CẢNH BÁO



Không để vật dụng sắc nhọn hướng xuống dưới!

Không để các vật dụng xuyên qua bên dưới.



Để đạt được hiệu suất tốt nhất, nên tham khảo cách sắp xếp vật dụng ở mỗi rổ trong Phần I: Phiên bản chung

• Chức năng của xà phòng và nước làm bóng

Nước làm bóng sẽ được giải phóng trong lần rửa cuối cùng để ngăn chặn những giọt đọng lại trên chén đĩa. Nó cũng cải thiện việc sấy khô, bằng cách để nước thoát khỏi chén đĩa. Máy rửa chén của bạn được thiết kế phù hợp cho nước làm bóng dạng lỏng.

⚠ CẢNH BÁO

Chỉ sử dụng nước làm bóng cho máy rửa chén. Không đổ đầy hoặc chứa nước làm bóng bằng một chất nào khác. Điều này sẽ làm hỏng thiết bị.

Khi thêm nước làm bóng

Lượng nước làm bóng tùy thuộc vào lượng chén đĩa và chế độ cài đặt đang sử dụng.

- Đèn báo nước làm bóng ở mức thấp (🔼) sẽ sáng khi cần thêm nước làm bóng.
- Không đổ quá nhiều nước làm bóng.

Chức năng của xà phòng

Các thành phần hóa học cấu thành xà phòng là cần thiết để loại bỏ, nghiền nát và xử lý tất cả bụi bẩn trong máy rửa chén. Máy rửa chén sử dụng xà phòng dùng riêng cho máy rửa chén.


⚠ CẢNH BÁO

- Sử dụng xà phòng
Chỉ sử dụng xà phòng dành riêng cho máy rửa chén. Bảo quản xà phòng khô ráo.
Không cho xà phòng vào cho đến khi bạn sẵn sàng rửa chén.




Xà phòng có tính ăn mòn! Tránh xa tầm tay trẻ em.


• Thêm nước làm bóng

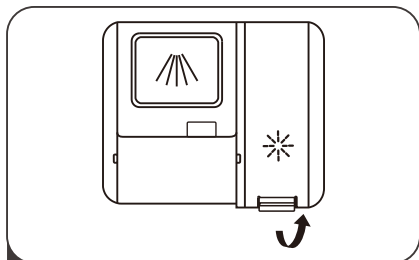

- 1** Tháo nắp nước làm bóng bằng cách mở nắp lên.

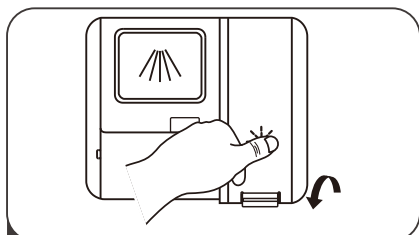

- 3** Đóng nắp sau khi thực hiện xong.

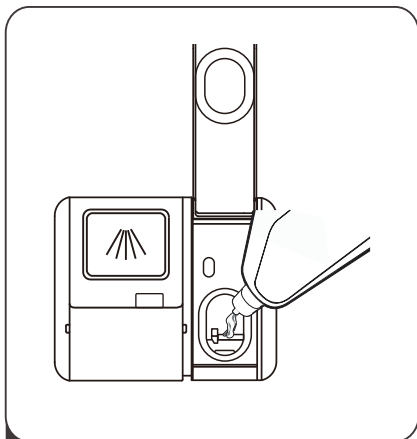


- 2** Cẩn thận đổ nước làm bóng vào hộc chứa, tránh để tràn ra ngoài.

Điều chỉnh mức độ nước làm bóng


Để đạt được hiệu suất tốt hơn với lượng chất làm bóng hạn chế, máy rửa chén được thiết kế để điều chỉnh mức tiêu thụ của người dùng. Thực hiện theo các bước dưới đây.

1. Mở cửa, bật thiết bị.
2. Trong vòng 60 giây sau khi bật thiết bị, hãy chạm phím chương trình trong hơn 5 giây, sau đó chạm phím Trì hoãn để vào chế độ cài đặt, đèn báo tương ứng sẽ nhấp nháy.
3. Chạm phím Chương trình một lần nữa để chọn chế độ phù hợp theo thói quen sử dụng của bạn, chế độ cài đặt sẽ thay đổi theo trình tự sau:
d1->d2->d3->d4->d5->d1.
Số càng cao, máy rửa chén sử dụng càng nhiều chất làm bóng.
4. Máy tự xác nhận trong 5 giây hoặc chạm phím Nguồn để hoàn tất cài đặt và thoát khỏi chế độ cài đặt.


• Thêm xà phòng

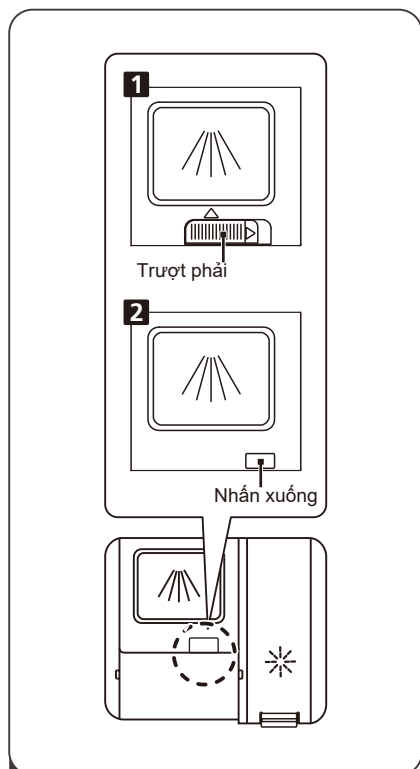

- 1** Hãy lựa chọn cách mở theo mô hình thực tế
1. Mở nắp bằng cách trượt chốt nhả.
 2. Mở nắp bằng cách nhấn xuống.

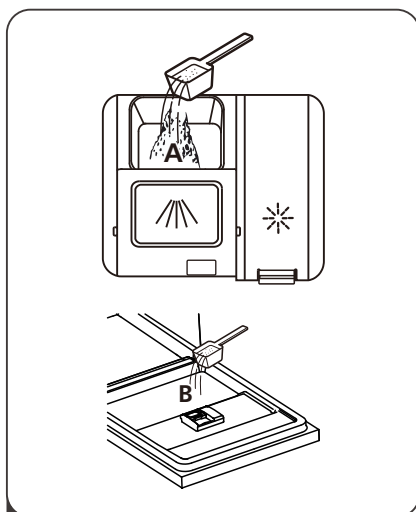

- 2** Thêm xà phòng vào khoang lớn hơn (A) đối với chu trình chính. Để đạt được hiệu suất tốt hơn, đặc biệt đối với chén đĩa bị bẩn nhiều, thêm xà phòng vào khoang nhỏ hơn (B) cho chu trình rửa trước.

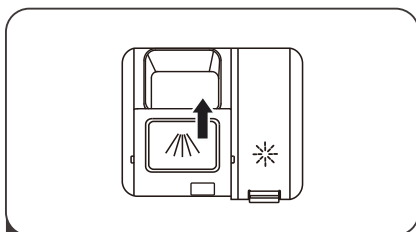

- 3** Đóng nắp bằng cách trượt và nhấn nhẹ cho đến khi nắp đậy vào đúng vị trí.

💡 GHI CHÚ:

Vui lòng tuân thủ tất cả khuyến nghị của nhà sản xuất trên bao bì xà phòng.

CHƯƠNG TRÌNH RỬA

Bảng chương trình rửa

Bảng dưới đây cho biết chương trình nào là tốt nhất cho mức độ bẩn thức ăn trên đó và lượng xả phòng cần thiết. Bảng này cũng hiển thị nhiều thông tin khác nhau về các chương trình. Giá trị tiêu thụ và thời lượng chương trình chỉ mang tính chất tham khảo, ngoại trừ chương trình ECO.

(●) chỉ ra rằng chương trình sử dụng chất làm bóng trong lần xả cuối cùng.

Chương trình	Mô tả chu trình	Lượng xả phòng	Thời gian (phút)	Hiệu suất (Kwh)	Lượng nước (L)	Thêm xả phòng
 Tự động	Rửa trước (45°C)					
	Rửa (55-65°C)					
	Xả	5/32.5g	85-150	1.050-1.551	10.6-15.9	●
	Xả	1 or 2 viên				
	Xả (50-55°C)					
	Sấy					
 Rửa kỹ	Rửa trước (50°C)					
	Rửa (65°C)					
	Xả	5/32.5g	205	1.651	16.5	●
	Xả	1 or 2 viên				
	Xả (60°C)					
	Sấy					
 Phổ biến	Rửa trước (45°C)					
	Rửa (55°C)					
	Xả	5/32.5g	175	1.451	16.5	●
	Xả	1 or 2 viên				
	Xả (60°C)					
	Sấy					
ECO (*EN50242)	Rửa (50°C)					
	Xả	37.5g	210	0.847	10.0	●
	Xả (50°C)	1 or 2 viên				
	Sấy					
 Rửa ly	Rửa trước (40°C)					
	Rửa (50°C)					
	Xả	5/32.5g	120	0.902	13.5	●
	Xả (50°C)	1 or 2 viên				
	Sấy					

Chương trình	Mô tả chu trình	Lượng xà phòng	Thời gian (phút)	Hiệu suất (Kwh)	Lượng nước (L)	Thêm xà phòng
 90 min	Rửa(55°C) Xả Xả(50°C) Sấy	$\frac{37.5g}{1 \text{ viên}}$	90	0.891	10.3	●
 Rửa nhanh	Rửa(40°C) Xả(40°C) Xả(55°C)	15g	30	0.781	11.0	○
 Ngâm	Rửa trước		15	0.021	4.0	○



GHI CHÚ:

ECO : Chương trình này là chu trình thử nghiệm. Thông tin về kiểm tra so
 (*EN50242) sánh theo EN 50242.

Tiết kiệm năng lượng

1. Việc tráng trước đồ dùng sẽ làm tăng lượng nước và năng lượng tiêu thụ và không được khuyến khích.
2. Rửa đồ dùng bằng máy rửa chén gia dụng thường tiêu thụ ít năng lượng và nước hơn khi sử dụng so với rửa bằng tay nếu sử dụng máy rửa chén gia dụng theo đúng hướng dẫn.

Khởi động một chương trình rửa

1. Kéo rổ trên và rổ dưới, thêm chén đĩa cần rửa vào các rổ và đẩy chúng trở lại. Bạn nên xếp rổ dưới trước, sau đó xếp rổ trên.
2. Thêm xà phòng.
3. Cắm phích cắm vào ổ cắm. Đảm bảo nguồn cấp nước được bật đến áp suất đầy đủ.
4. Đóng cửa, nhấn nút nguồn.
5. Chọn một chương trình, đèn phản hồi sẽ sáng. Sau đó nhấn phím Bắt đầu/Tạm dừng, máy rửa chén sẽ bắt đầu chu trình của nó.

Thay đổi chế độ rửa giữa chương trình

Chỉ có thể thay đổi chương trình rửa nếu nó đã vận hành trong một khoảng thời gian ngắn, xà phòng có thể được hòa tan và máy rửa chén có thể đã xả một lượng chất tẩy rửa. Nếu trường hợp này xảy ra, máy rửa chén cần được cài đặt lại và xà phòng phải được nạp lại. Để cài đặt lại máy rửa chén hãy làm theo hướng dẫn dưới đây:


1. Mở cửa một chút để dừng máy rửa chén, sau khi tay phun ngừng hoạt động, bạn có thể mở cửa hoàn toàn.
2. Chạm phím Chương trình hơn 3 giây, máy sẽ ở chế độ chọn chương trình.
3. Bạn có thể thay đổi chương trình theo cài đặt chu kỳ mong muốn.



Bỏ quên chén đĩa?

Chén đĩa bỏ quên có thể được thêm vào trước khi mở hộc xà phòng. Nếu trường hợp này xảy ra, vui lòng làm theo các bước sau:

1. Mở cửa một chút để dừng máy rửa chén.
2. Sau khi tay phun ngừng hoạt động, bạn có thể mở cửa hoàn toàn.
3. Thêm chén đĩa bỏ quên.
4. Đóng cửa.
5. Máy rửa chén sẽ bắt đầu lại.

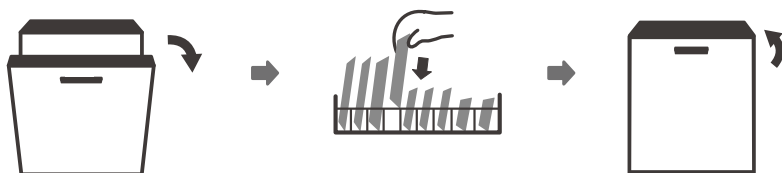

⚠ CẢNH BÁO



Nguy hiểm khi bạn mở ngăn rửa giữa chu kỳ rửa vì hơi nóng có thể gây phỏng.

Tự động mở cửa

Cửa sẽ tự động mở trong chu kỳ sấy để thoát hơi nước (trừ chương trình rửa ngâm 15 phút và rửa nhanh 30 phút), thời gian cửa mở mặc định theo từng chương trình rửa.

Chức năng mở cửa tự động được thiết lập sẵn cho các chương trình rửa tự động, rửa kỹ, rửa phổ biến, rửa tiết kiệm, rửa ly và rửa 90 phút. Đèn báo biểu tượng  sẽ sáng.

Để Tắt/Mở chức năng mở cửa tự động, thực hiện như sau:

Chọn chương trình rửa, chạm phím  khoảng 3 giây để tắt/mở chức năng tự động mở cửa, đèn báo biểu tượng  sẽ tắt/sáng.



MÃ LỖI


Nếu có trục trặc, máy rửa chén sẽ hiển thị mã lỗi. Bảng sau đây hiển thị các mã lỗi có thể xảy ra và nguyên nhân của chúng.

Mã lỗi	Ý nghĩa	Nguyên nhân
E1	Thời gian cấp nước lâu	Vòi không mở hoặc lượng nước bị hạn chế, hoặc áp lực nước yếu.
E3	Không đạt đến nhiệt độ yêu cầu	Bộ phận gia nhiệt bị lỗi.
E4	Nước tràn	Một số bộ phận bị rò rỉ.
E8	Lỗi van điều hướng thủy lực	Hở mạch hoặc vỡ van điều hướng.
E9	Giữ 1 phím trong hơn 30 giây	Nước trên phím hoặc cản phím.
Ed	Lỗi kết nối giữa PCB chính và PCB hiển thị	Hở mạch hoặc ngắn mạch.

⚠ CẢNH BÁO

- Nếu nước bị tràn, ngắt nguồn nước chính trước khi gọi dịch vụ kỹ thuật.
- Nếu nước bị tràn ra do rò rỉ nặng hoặc nhẹ, cần vệ sinh trước khi khởi động lại máy.
- Nếu có mã lỗi không thể xử lý được, vui lòng liên hệ dịch vụ kỹ thuật.

THÔNG SỐ KỸ THUẬT

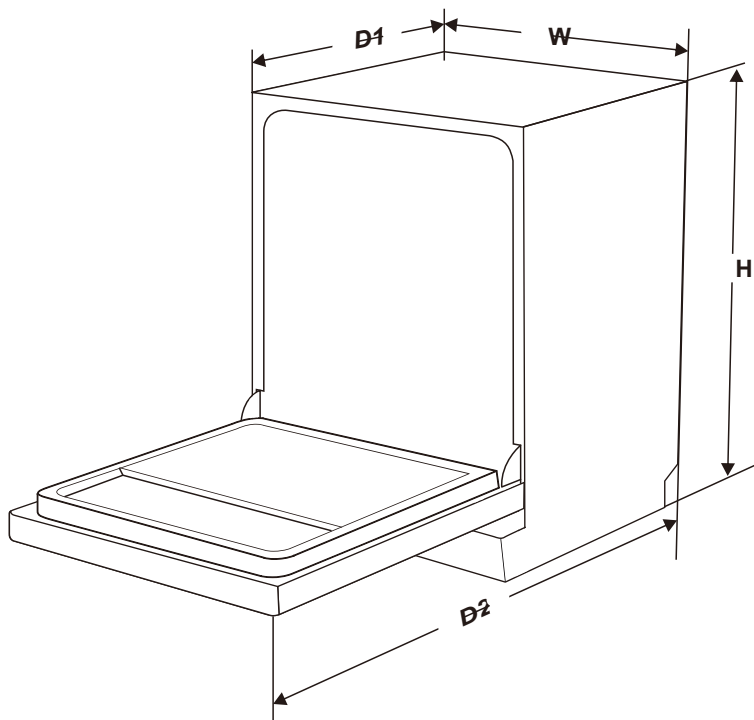

Cao (H)	815mm
Rộng (W)	598mm
Sâu (D1)	550mm (khi cửa đóng)
Sâu (D2)	1150mm (khi cửa mở 90°)

Sản phẩm

Bảng máy rửa chén gia dụng theo chỉ thị EU 1016/2010 & 1059/2010:

Nhà cung cấp	MALLOCA
Mã sản phẩm	MDW14-7713AD
Bộ chén đĩa tiêu chuẩn	15
Lớp tiết kiệm năng lượng ①	A+++
Mức tiêu thụ năng lượng hàng năm ②	241kWh
Tiêu thụ năng lượng của chu trình rửa	0,847 kWh 0,45
Tiêu thụ điện năng của chế độ tắt	W
Tiêu thụ điện năng của chế độ mở	0,49W
Tiêu thụ nước hàng năm ③	2800 lít
Hiệu năng lớp sấy khô ④	A
Chu trình rửa tiêu chuẩn ⑤	ECO 50°C
Thời lượng chu trình của chương trình tiêu chuẩn	210 min
Độ ồn	44 dB(A) re 1
Lắp đặt	pW Bulit - in
Có thể lắp âm	YES
Công suất tiêu thụ	1760-2100W
Điện áp/Tần số	220-240V/50Hz
Áp lực nước (áp lực dòng chảy)	0,04-1,0MPa=0,4-10 bar

GHI CHÚ:

- ①** A + + + (hiệu quả cao nhất) to D (hiệu quả thấp nhất)
- ②** Tiêu thụ năng lượng dựa trên 280 chu kỳ rửa tiêu chuẩn bằng cách sử dụng nước lạnh và tiêu thụ các chế độ năng lượng thấp. Tiêu thụ năng lượng thực tế sẽ phụ thuộc vào cách sử dụng thiết bị.
- ③** Tiêu thụ nước dựa trên 280 chu kỳ rửa tiêu chuẩn. Tiêu thụ nước thực tế sẽ phụ thuộc vào cách sử dụng thực tế.
- ④** A (hiệu quả cao nhất) to G (hiệu quả thấp nhất)
- ⑤** Chương trình này phù hợp để làm sạch những chén đĩa bẩn thông thường và đó là chương trình hiệu quả nhất về mức tiêu thụ năng lượng cũng như tiêu thụ nước.

MALLOCA VIETNAM COMPANY LIMITED

Showroom:

279 Nguyen Van Troi Street, Ward 10, Phu Nhuan District, HCM City
Tel: (84) 28 39975 893 / 94
Fax: (84) 28 38447 102
Email: info@malloca.com

Customer Care:

Hotline: 1800 12 12
Email: chamsockh@malloca.com

CÔNG TY TNHH MALLOCA VIỆT NAM

Showroom:

279 Đường Nguyễn Văn Trỗi, Phường 10, Quận Phú Nhuận, TP.HCM
Điện Thoại: (84) 28 39975 893 / 94
Fax: (84) 28 38447 102
Email: info@malloca.com

Hệ thống chăm sóc khách hàng:

Hotline: 1800 12 12
Email: chamsockh@malloca.com

Trung tâm chính

279 Đường Nguyễn Văn Trỗi, Phường 10, Quận Phú Nhuận, TP.HCM
SĐT: (028) 39975 893 / 94 – (028) 39975 294 / 95

Khu vực Bà Rịa Vũng Tàu

258-260A Lê Hồng Phong, Phường 4, TP. Vũng Tàu
SĐT: (0254) 385 94 99

Khu vực Tây Nguyên

331 Phan Đình Phùng, Phường 2, TP. Đà Lạt
SĐT: (0263) 3521 107 – 0918226362

Khu vực Nam Trung Bộ

08 Lê Hồng Phong, Phường Phước Hải, TP. Nha Trang
SĐT: (0258) 3875 488

Khu vực Miền Tây

180 Trần Hưng Đạo, Phường An Nghiệp, Quận Ninh Kiều, TP. Cần Thơ
SĐT: (0292) 373 2035

Khu vực Miền Trung

211 Nguyễn Văn Linh, Phường Vĩnh Trung, Quận Thanh Khê, TP. Đà Nẵng
SĐT: (0236) 369 1906

Khu vực Miền Bắc

10 Chương Dương Độ, Phường Chương Dương, Quận Hoàn Kiếm, Hà Nội
SĐT: (024) 35376 288 – 093 462 92 98